## Installation Range Trim Kit Instructions JXFILLR1BB, JXFILLR1SS, JXFILLR1DD

If you have questions, call GE Appliances at 800.GE.CARES (800.432.2737) or visit our website at: GEAppliances.com.



# Angled Front Surface



### Flat Surface Against Range

## 31-11118 07-17 GEA

INSTALLATION INSTRUCTIONS

If your range is to be installed against a wall, only parts 1 and 2 are recommended.

If your range is to be installed in an island configuration, parts 1,2, and 3 are recommended.

Parts 4 and 5 can be used in place of parts 1 and 2, but modifications may need to be completed by the customer for an ideal fit.

- 1. In order to securely install the trim kit, countertop surfaces around the range must be clean and dry.
- 2. Adjust the range height so that the top of the cooktop is 3/8" higher than the countertop and level. See range installation instructions on how to adjust unit height.



- 3. Before removing the adhesive backing, dry fit the trim pieces against the range. The angled front surface should be in the front for parts 1 and 2.
  - For wall installed ranges, the front edge of the side trims should line up with the front edge of the cooktop.



Edge of cooktop

For an island installation, center part 3 (has two angled ends) along the back edge of the range so that parts 1 and 2 are flush with part 3 for a continuous appearance.



- 4. If trim pieces 4 and 5 are used for either wall installation or island installation, ensure trim starts at the front edge of the countertop. Trim length modifications can be made by removing material from the back end of the trim piece.
- 5. After determining the location of the trim pieces, remove the adhesive backing and carefully place the trim pieces in their previous location. Press the trim pieces firmly down onto the countertop to adhere the double sided tape.



### FINAL ASSEMBLY REFERENCE

Installation against a wall:



Installation in an island:

