





## ENGLISH USE & CARE GUIDE

**YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.**  
We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.  
**WARNING** This is the safety alert symbol. It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.  
**AVERTISSEMENT** Indicates a hazardous situation which, if not avoided, could result in death or serious injury.  
**NOTICE** Is used to address practices not related to physical injury.

## INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

**IMPORTANT SAFETY INSTRUCTIONS**

**WARNING** Personal Injury: Do not position your head or body under disposer; unit could fall during removal or installation.

**GROUNDING INSTRUCTIONS**  
For all grounded, cord-connected disposers:  
This disposer must be grounded to reduce the risk of electric shock in the event of a malfunction or breakdown. Grounding provides a path of least resistance for electric current. This disposer is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**For permanently connected disposers:**  
This disposer must be connected to a grounded, metal, permanent wiring system; an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the disposer.

**NOTICE**

- Do not use plumber's putty on any other disposer connection other than sink flange. Do not use thread sealants or pipe dope. These may harm disposer and cause property damage.
- To prevent leaks, do not pull or bend discharge tube to drain trap.

**WARNING** When using electric appliances, basic precautions are always to be followed, including:

- Read all instructions before using the appliance.
- To reduce the risk of injury, close supervision is required when an appliance is used near children.
- Do not pull fingers or hands into a waste disposer.
- Turn the power switch to the off position before attempting to clear a jam, removing an object from the disposer or pressing reset button.
- When attempting to loosen a jam in a waste disposer, use the self-service wrenchette.
- When attempting to remove objects from a waste disposer, use a long-handled wooden spoon.
- FIRE HAZARD: Do not store flammable items such as rags, paper or aerosol cans near disposer. Do not store or use gasoline or other flammable vapors and liquids in vicinity of disposer.
- LEAK HAZARD: Regularly inspect disposer and plumbing fittings for leaks, which can cause property damage and could result in personal injury.
- When not operating a disposer, leave the stopper in place to reduce the risk of objects falling into the disposer.

**SAVE THESE INSTRUCTIONS**

## OPERATING INSTRUCTIONS

1. Remove stopper from sink opening and run cold water.  
2. Turn on wall switch to start disposer.

3. Slowly insert food waste into disposer. **WARNING!** Position stopper to minimize possible ejection of material while grinding.

4. After grinding is complete, turn disposer off and run water for a few seconds to flush drain line.

## DO'S...

• First turn on cold water and then turn on the disposer. Continue running cold water for several seconds after grinding is completed to flush the drain line.

• Grind hard materials such as small bones, fruit pits, and ice. A scouring action is created by the particles inside the grind chamber.

• Don't use hot water when grinding food waste. It burns the water into the disposer between grinding periods.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc., to avoid possible drain blockage.

• Don't turn off disposer until grinding is completed and only sound of motor and water is heard.

• Stop and read Detengase y lea Arreter et lire

• DON'T POUR GREASE OR FAT DOWN YOUR DISPOSER OR ANY DRAIN. IT CAN BUILD UP IN THE TRITURADOR NI EN NINGUN DRAIN. ESTOS MATERIALES SE PUEDEN ACUMULAR EN LAS CAÑERIAS Y TAPAR EL DRENAGE. COLOQUE LA GRASA EN UN FRASCO O LATA Y DESCHÉCHOLA EN LA BASURA.

• Don't pour grease or fat down the disposer after grinding.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc., to avoid possible drain blockage.

• Don't turn off disposer until grinding is completed and only sound of motor and water is heard.

• Stop and read Detengase y lea Arreter et lire

• NO POUR GREASE OR FAT DOWN YOUR DISPOSER OR ANY DRAIN. IT CAN BUILD UP IN THE TRITURADOR NI EN NINGUN DRAIN. ESTOS MATERIALES SE PUEDEN ACUMULAR EN LAS CAÑERIAS Y TAPAR EL DRENAGE. COLOQUE LA GRASA EN UN FRASCO O LATA Y DESCHÉCHOLA EN LA BASURA.

• Don't pour grease or fat down the disposer after grinding.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc., to avoid possible drain blockage.

• Don't turn off disposer until grinding is completed and only sound of motor and water is heard.

• Stop and read Detengase y lea Arreter et lire

• NO POUR GREASE OR FAT DOWN YOUR DISPOSER OR ANY DRAIN. IT CAN BUILD UP IN THE TRITURADOR NI EN NINGUN DRAIN. ESTOS MATERIALES SE PUEDEN ACUMULAR EN LAS CAÑERIAS Y TAPAR EL DRENAGE. COLOQUE LA GRASA EN UN FRASCO O LATA Y DESCHÉCHOLA EN LA BASURA.

• Don't pour grease or fat down the disposer after grinding.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc., to avoid possible drain blockage.

• Don't turn off disposer until grinding is completed and only sound of motor and water is heard.

• Stop and read Detengase y lea Arreter et lire

• NO POUR GREASE OR FAT DOWN YOUR DISPOSER OR ANY DRAIN. IT CAN BUILD UP IN THE TRITURADOR NI EN NINGUN DRAIN. ESTOS MATERIALES SE PUEDEN ACUMULAR EN LAS CAÑERIAS Y TAPAR EL DRENAGE. COLOQUE LA GRASA EN UN FRASCO O LATA Y DESCHÉCHOLA EN LA BASURA.

• Don't pour grease or fat down the disposer after grinding.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc., to avoid possible drain blockage.

• Don't turn off disposer until grinding is completed and only sound of motor and water is heard.

• Stop and read Detengase y lea Arreter et lire

• NO POUR GREASE OR FAT DOWN YOUR DISPOSER OR ANY DRAIN. IT CAN BUILD UP IN THE TRITURADOR NI EN NINGUN DRAIN. ESTOS MATERIALES SE PUEDEN ACUMULAR EN LAS CAÑERIAS Y TAPAR EL DRENAGE. COLOQUE LA GRASA EN UN FRASCO O LATA Y DESCHÉCHOLA EN LA BASURA.

• Don't pour grease or fat down the disposer after grinding.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc., to avoid possible drain blockage.

• Don't turn off disposer until grinding is completed and only sound of motor and water is heard.

• Stop and read Detengase y lea Arreter et lire

• NO POUR GREASE OR FAT DOWN YOUR DISPOSER OR ANY DRAIN. IT CAN BUILD UP IN THE TRITURADOR NI EN NINGUN DRAIN. ESTOS MATERIALES SE PUEDEN ACUMULAR EN LAS CAÑERIAS Y TAPAR EL DRENAGE. COLOQUE LA GRASA EN UN FRASCO O LATA Y DESCHÉCHOLA EN LA BASURA.

• Don't pour grease or fat down the disposer after grinding.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc., to avoid possible drain blockage.

• Don't turn off disposer until grinding is completed and only sound of motor and water is heard.

• Stop and read Detengase y lea Arreter et lire

• NO POUR GREASE OR FAT DOWN YOUR DISPOSER OR ANY DRAIN. IT CAN BUILD UP IN THE TRITURADOR NI EN NINGUN DRAIN. ESTOS MATERIALES SE PUEDEN ACUMULAR EN LAS CAÑERIAS Y TAPAR EL DRENAGE. COLOQUE LA GRASA EN UN FRASCO O LATA Y DESCHÉCHOLA EN LA BASURA.

• Don't pour grease or fat down the disposer after grinding.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc., to avoid possible drain blockage.

• Don't turn off disposer until grinding is completed and only sound of motor and water is heard.

• Stop and read Detengase y lea Arreter et lire

• NO POUR GREASE OR FAT DOWN YOUR DISPOSER OR ANY DRAIN. IT CAN BUILD UP IN THE TRITURADOR NI EN NINGUN DRAIN. ESTOS MATERIALES SE PUEDEN ACUMULAR EN LAS CAÑERIAS Y TAPAR EL DRENAGE. COLOQUE LA GRASA EN UN FRASCO O LATA Y DESCHÉCHOLA EN LA BASURA.

• Don't pour grease or fat down the disposer after grinding.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc., to avoid possible drain blockage.

• Don't turn off disposer until grinding is completed and only sound of motor and water is heard.

• Stop and read Detengase y lea Arreter et lire

• NO POUR GREASE OR FAT DOWN YOUR DISPOSER OR ANY DRAIN. IT CAN BUILD UP IN THE TRITURADOR NI EN NINGUN DRAIN. ESTOS MATERIALES SE PUEDEN ACUMULAR EN LAS CAÑERIAS Y TAPAR EL DRENAGE. COLOQUE LA GRASA EN UN FRASCO O LATA Y DESCHÉCHOLA EN LA BASURA.

• Don't pour grease or fat down the disposer after grinding.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc., to avoid possible drain blockage.

• Don't turn off disposer until grinding is completed and only sound of motor and water is heard.

• Stop and read Detengase y lea Arreter et lire

• NO POUR GREASE OR FAT DOWN YOUR DISPOSER OR ANY DRAIN. IT CAN BUILD UP IN THE TRITURADOR NI EN NINGUN DRAIN. ESTOS MATERIALES SE PUEDEN ACUMULAR EN LAS CAÑERIAS Y TAPAR EL DRENAGE. COLOQUE LA GRASA EN UN FRASCO O LATA Y DESCHÉCHOLA EN LA BASURA.

• Don't pour grease or fat down the disposer after grinding.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc., to avoid possible drain blockage.

• Don't turn off disposer until grinding is completed and only sound of motor and water is heard.

• Stop and read Detengase y lea Arreter et lire

• NO POUR GREASE OR FAT DOWN YOUR DISPOSER OR ANY DRAIN. IT CAN BUILD UP IN THE TRITURADOR NI EN NINGUN DRAIN. ESTOS MATERIALES SE PUEDEN ACUMULAR EN LAS CAÑERIAS Y TAPAR EL DRENAGE. COLOQUE LA GRASA EN UN FRASCO O LATA Y DESCHÉCHOLA EN LA BASURA.

• Don't pour grease or fat down the disposer after grinding.

• Grind feelings from citrus fruits to freshen up drain smells.

• Use a disposer cleaner, degreaser, or deodorizer as necessary to relieve objectionable odors caused by grease build-up.

• Don't fill disposer with a lot of vegetable peels all at once. Instead, turn the water and disposer on first, and then feed the peels in gradually.

• Don't grind large amounts of egg shells or fibrous materials like corn husks, artichokes, etc