

 
**KitchenAid®**

**48" 6 BURNER COMMERCIAL GAS COOKTOP  
Includes Griddle**

**MODELS:**

KCGC558JSS00 (Stainless)


# BURNER BOX AND GRIDDLE PARTS

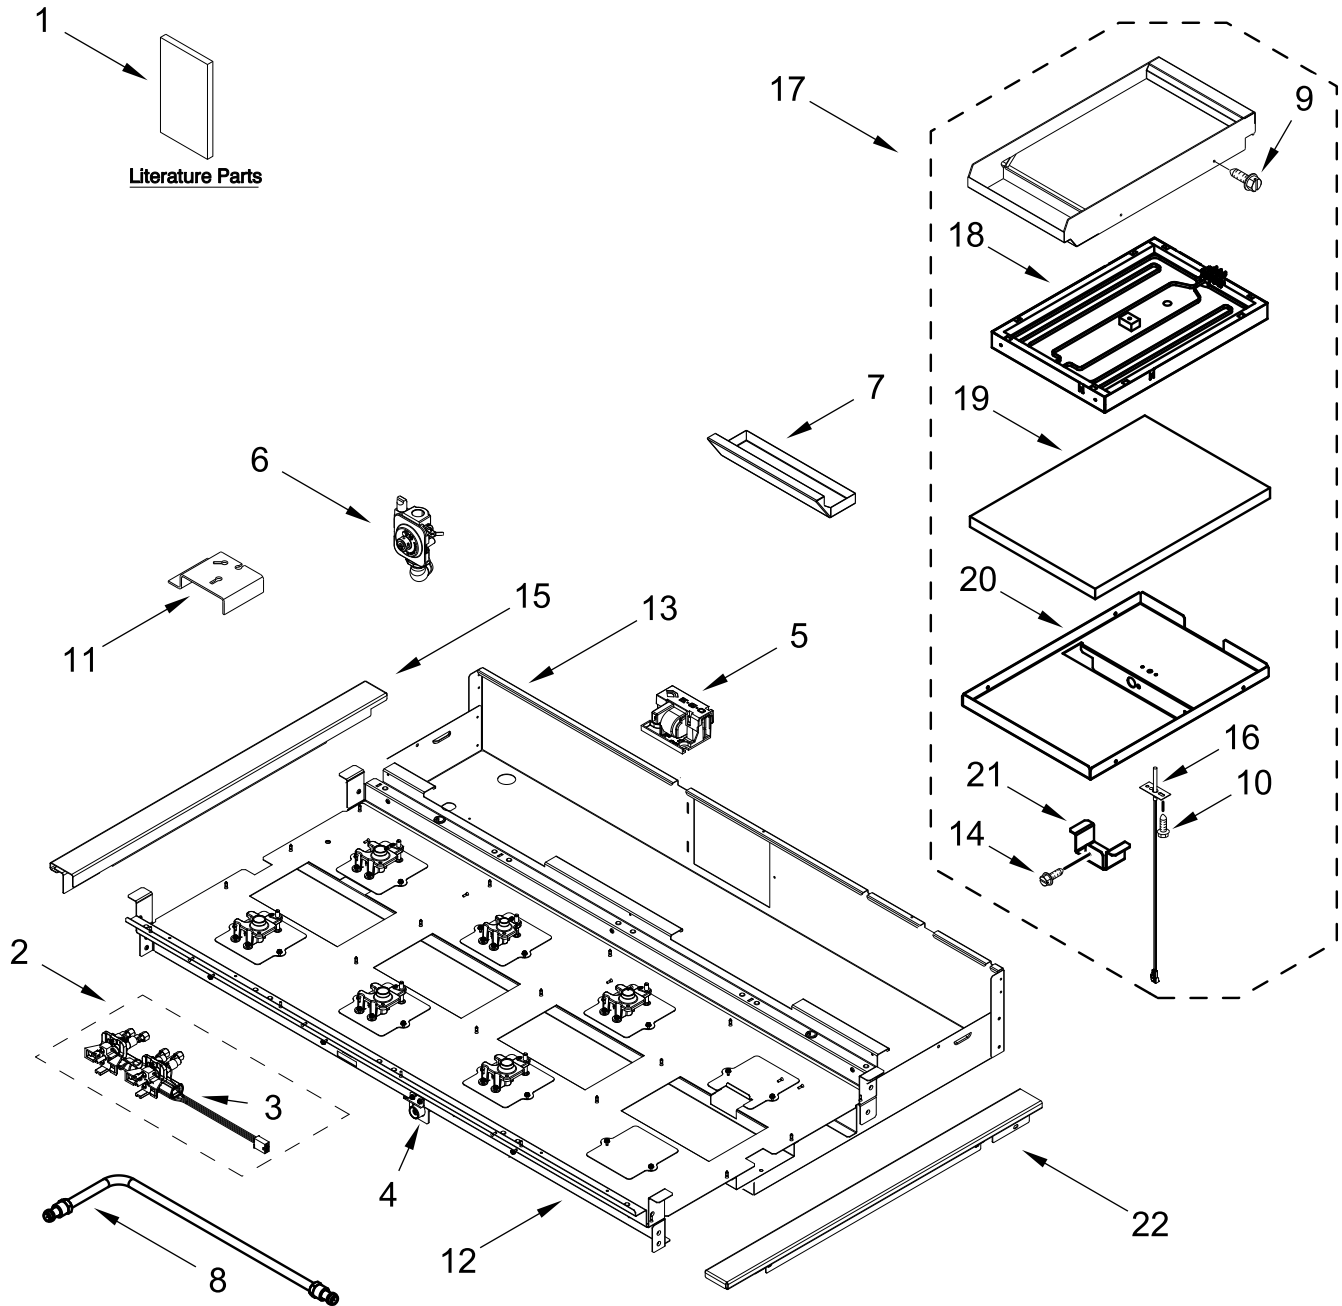

# BURNER BOX AND GRIDDLE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11121317	Module, Spark	16	W10891584	Sensor, Griddle
	W11179810	Guide, Use & Care	6	W10449140	Regulator, Pressure	17	W10891745	Assembly, Griddle Module
	W11179813	Instructions, Installation	7	W10276497	Tray, Griddle Drip	18	W10891698	Element, Griddle
	W11202393	Diagram, Wiring	8	W10892347	Tube, Manifold Supply (Left)	19	W11121383	Insulation, Griddle
	W11202295	Sheet, Tech		W10892445	Tube, Manifold Supply (Left Center)	20	W11330430	Tray, Griddle Insulation
2	W11183720	Assembly, Valve Manifold (Left Front and Left Rear)		W10892450	Tube, Manifold Supply (Right Center)	21	W11121384	Bracket, Griddle-RTD
	W11036612	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	9	3196176	Screw	22	W11047751	Main Trim, Right FOLLOWING PARTS NOT ILLUSTRATED
	W10892994	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	10	3196160	Screw		W11200329	Harness, Cooktop
			11	8285790	Bracket, Mounting Orifice		W10903727	Harness, Griddle
			12		Assembly, Burner Box (Not Serviced)		W11038934	Harness, Jumper
			13		Box, Burner (Not Serviced)		W10624584	Cord, Power
3	W10903728	Switch, Harness	14	7101P426-60	Screw		W11238042	Kit, LP Conversion
4	W11121199	Bracket, Manifold	15	W11047749	Main Trim, Left			
 
# COOKTOP, BURNER, AND GRIDDLE PARTS

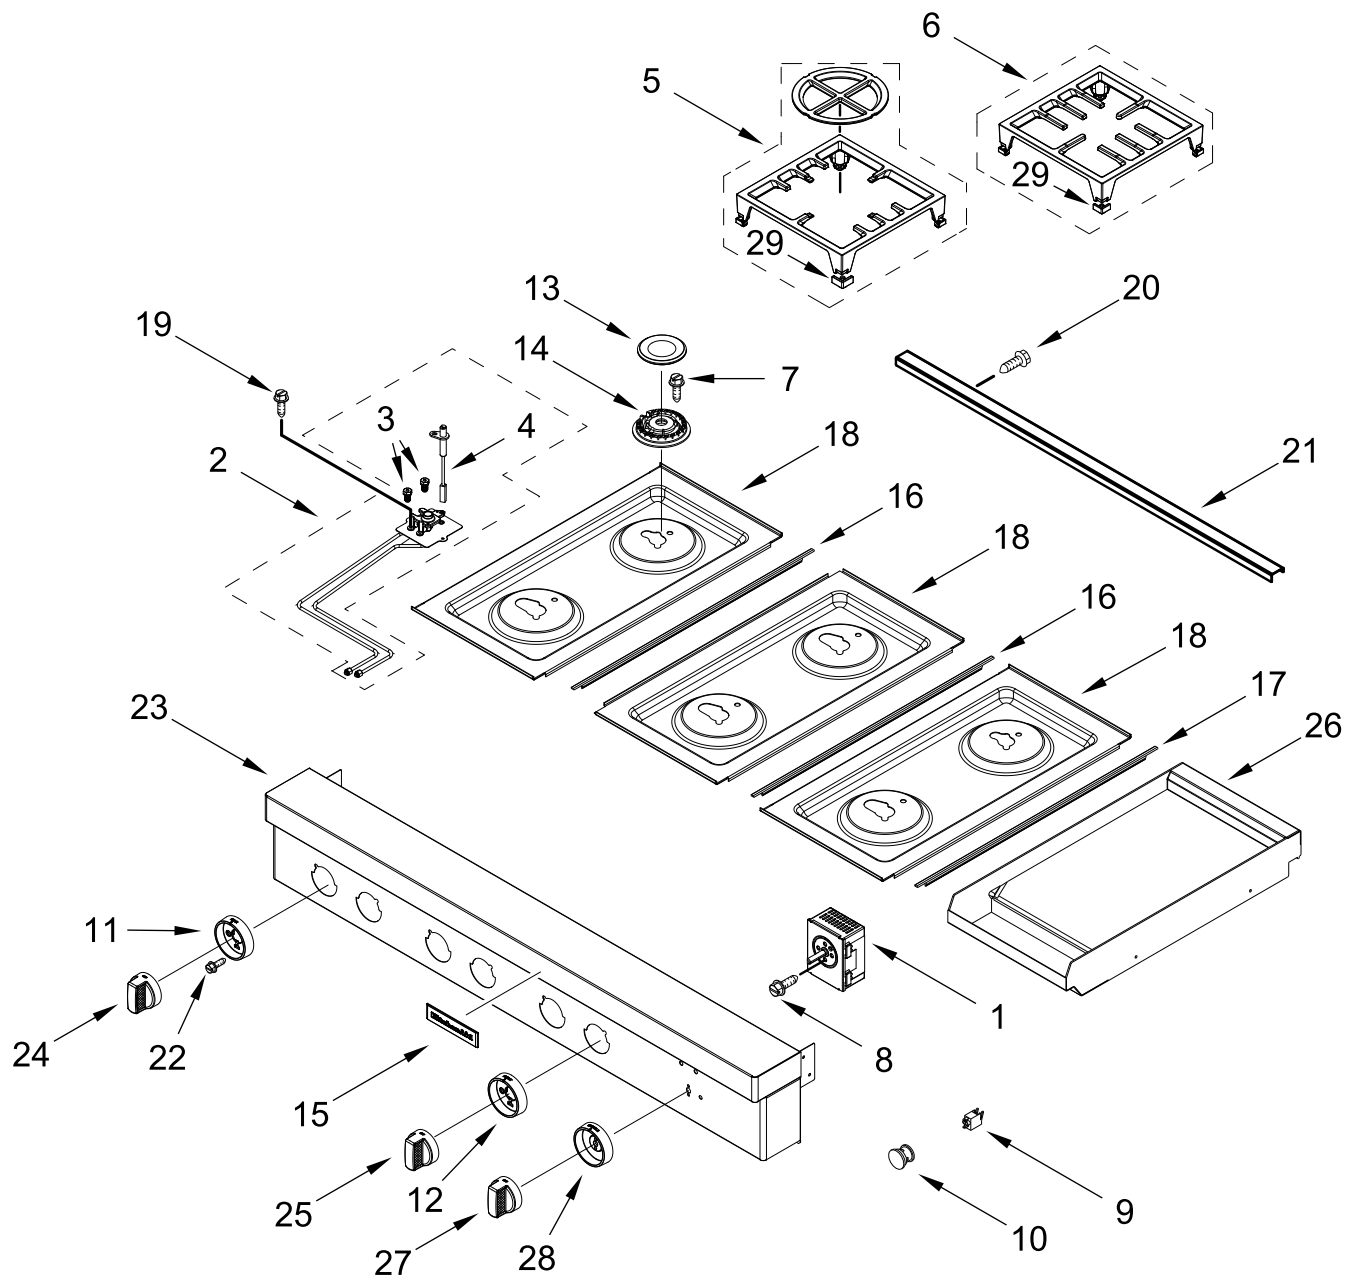

# COOKTOP, BURNER, AND GRIDDLE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11033497	Control, Griddle	7	W11323261	Screw (8-18 X 1")	21	W11355761	Trim, Island
2	W10892771	Assembly, Orifice Holder (Left Front, Right Center Front)		W11323309	Screw (8-18 X 1/2")	22	W10919387	Screw
	W10892484	Assembly, Orifice Holder (Left Rear, Right Center Rear)	8	W10674068	Screw	23	W10878405	Panel, Console
	W11159468	Assembly, Orifice Holder (Left Center Front)	9	W10116114	Light, Indicator Housing	24	W10912166	Stainless Knob, Single
	W10892767	Assembly, Orifice Holder (Left Center Rear)	10	W10294500	Lens, Indicator Light	25	W10883172	Stainless Knob, Dual
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Center Front)	11	W10883433	Bezel (Rear Burners)	26	W10891745	Assembly, Griddle Module (Assembly Breakdown Shown on Burner Box Page)
	W10892419	Orifice, Main (15K) (Left Rear, Left Center Front, Right Center Rear)	12	W10881642	Bezel (Front Burners)			
	W10892438	Orifice, Simmer (5K) (Left Center Rear)	13		Cap, Burner	27		Knob, Griddle
4	W11238758	Igniter (Left Front, Right Center Front)		W11121390	Black (Includes 6)		W10912167	Stainless
	W10892340	Igniter (Left Rear, Left Center Front, Left Center Rear, Right Center Rear)	14	W10891746	Spreader, Flame (High) (Left Front, Right Center Front)	28	W10886700	Bezel, Griddle
5	W11291183	Burner, Grate (With Wok Ring)		W10891974	Spreader, Flame (Low) (Left Rear, Left Center Front, Right Center Rear)	29	W11042504	Bumper, Grate
6	W11291179	Burner, Grate		W10891978	Spreader, Flame (AUX) (Left Center Rear)			
			15	W10518672	Badge			
			16		Trim, T-Strip			
				W10271524	Black			
			17	W10291193	Trim, L-Strip			
			18		Panel, Cooktop			
				W11038235	Black (Left)			
				W11038257	Black (Left Center)			
				W11038243	Black (Right Center)			
			19	7101P426-60	Screw			
			20	7101P338-60	Screw			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude