


KitchenAid®

Dishwasher

MODELS:

KDTF924PPS0 (Stainless)


DOOR AND PANEL PARTS

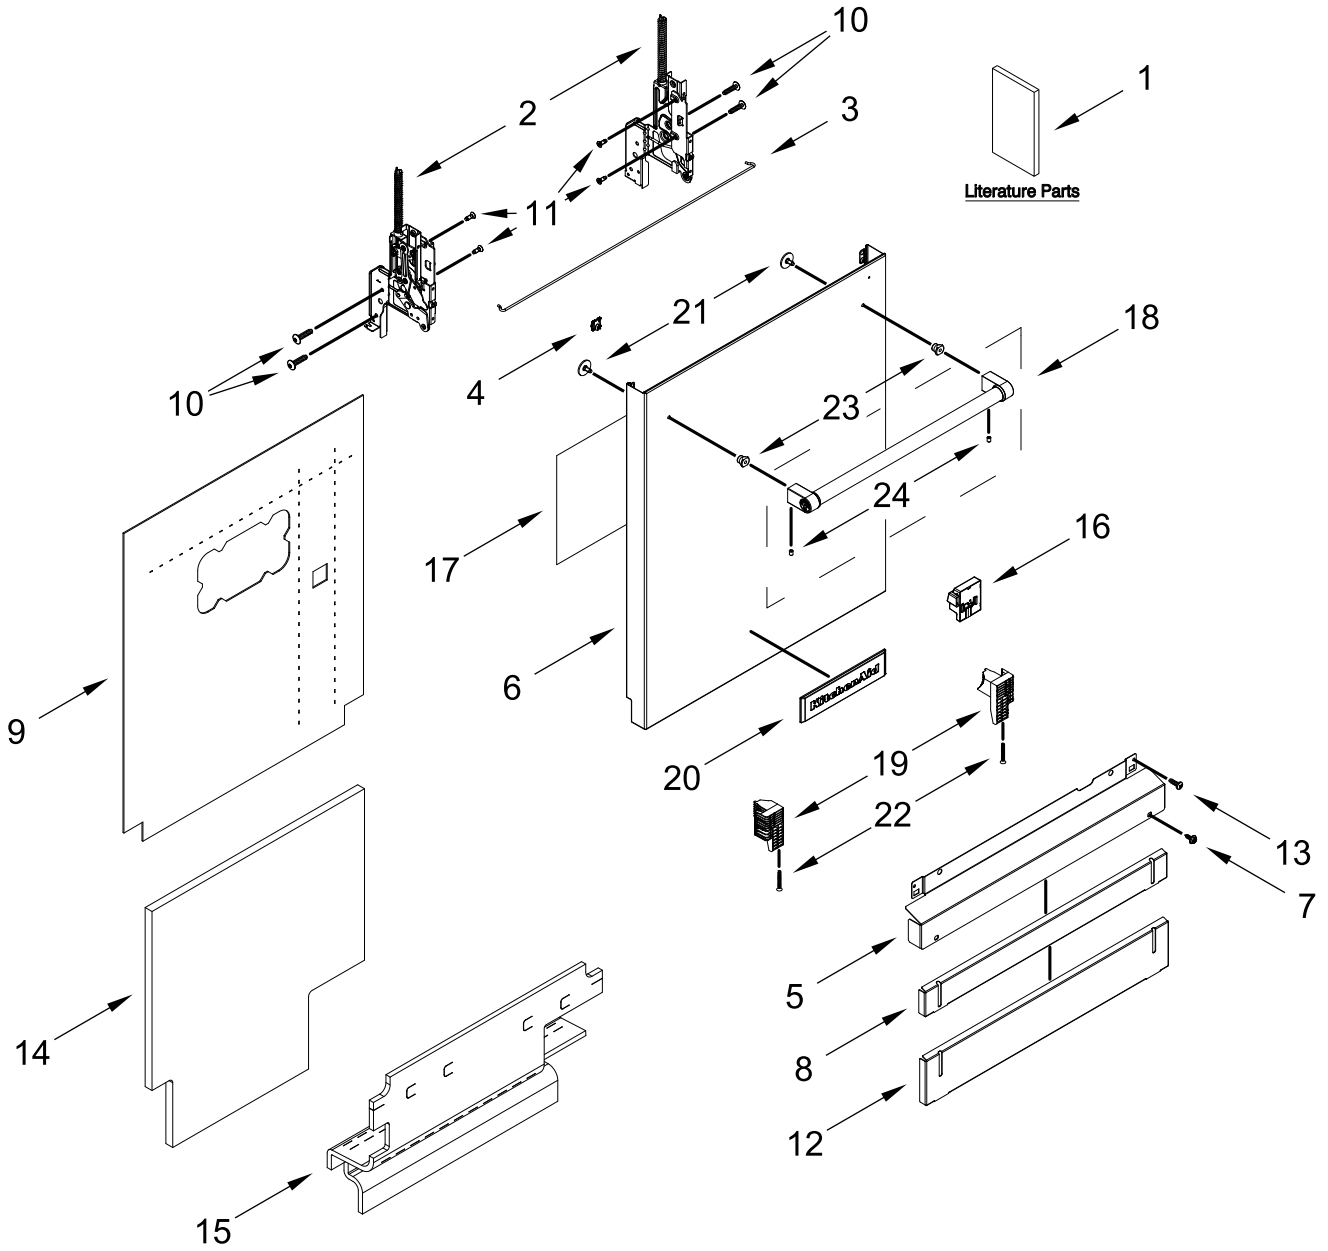

DOOR AND PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	302868	Screw (Black)	18		Handle
	W11589935	Owners Manual	8	W11625159	Panel, 2" Adjustable (Black)		W11417401	Stainless
	W11645481	Energy Guide				19	W11545693	Support, Door (Left)
	W11663923	Tech Sheet	9	W11564603	Insulation, Inner Door		W11545696	Support, Door (Right)
2		Arm, Hinge	10	W10942031	Screw	20	W10518673	Nameplate
	W11507818	Left Hand	11	W10941985	Screw	21	W10316572	Screw
	W11507890	Right Hand	12	W11625156	Panel, 4" Adjustable (Black)	22	W11381263	Screw
3	W11126789	Cross Brace, Door	13	W10942053	Screw	23	W11049903	Stud, Mounting
4	W11634283	Nut, Barrel	14	W11575172	Insulation, Door	24	W10687133	Set Screw
5	W11625157	Panel, Main Access (Black)	15	W11609389	Insulation, Long Tub Lip			
6		Front Panel (Includes 4,10,19,20,21,22 & 23)	16	W11540965	Display, Floor			
	W11545470	Stainless	17	W11641124	Insulation, Front Panel			


CONTROL PANEL AND INNER DOOR PARTS

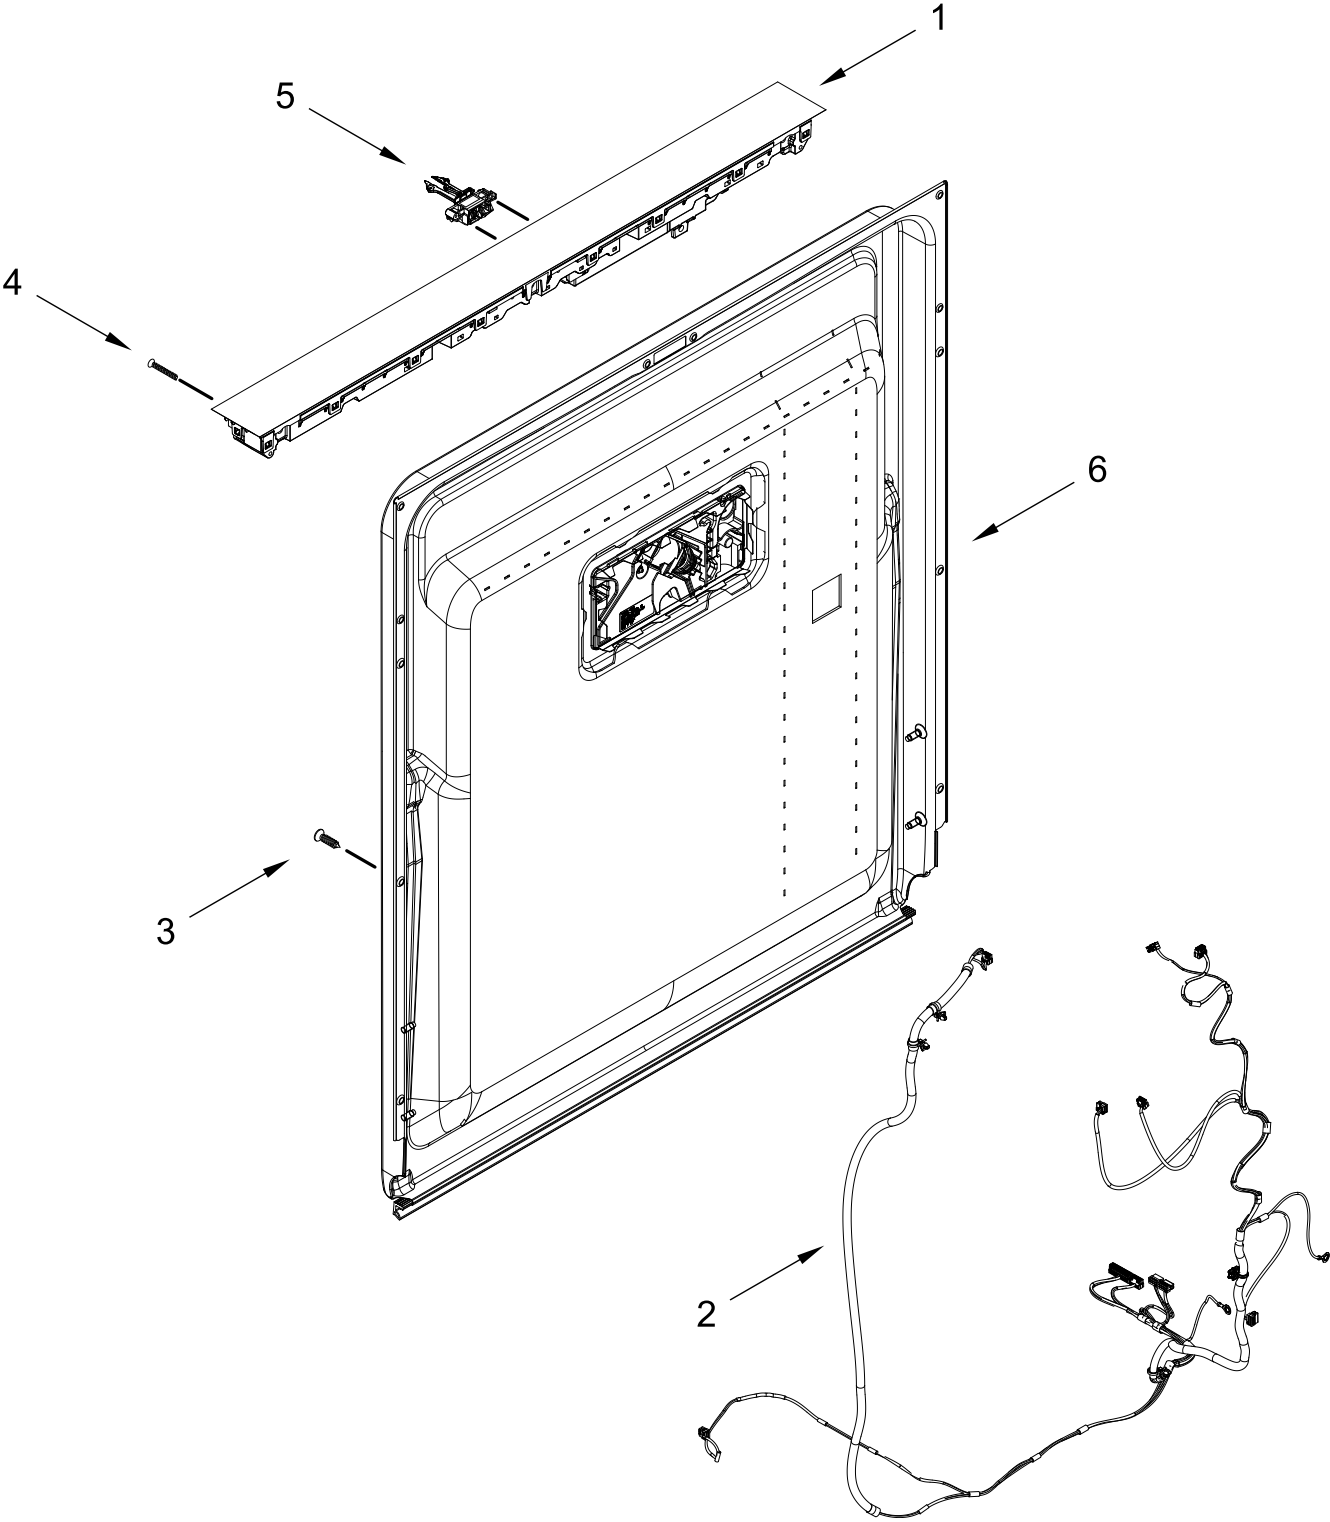

CONTROL PANEL AND INNER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console Assembly (Includes Insert)	3	W10941960	Screw	5	W11091934	Latch Assembly (Includes Switch)
	W11548937	Black	4	W11381263	Screw	6	W11715716	Inner Door Assembly (Includes Soap Dispenser)
2	W11592240	Wiring Harness, Inner Door						


TUB AND FRAME PARTS

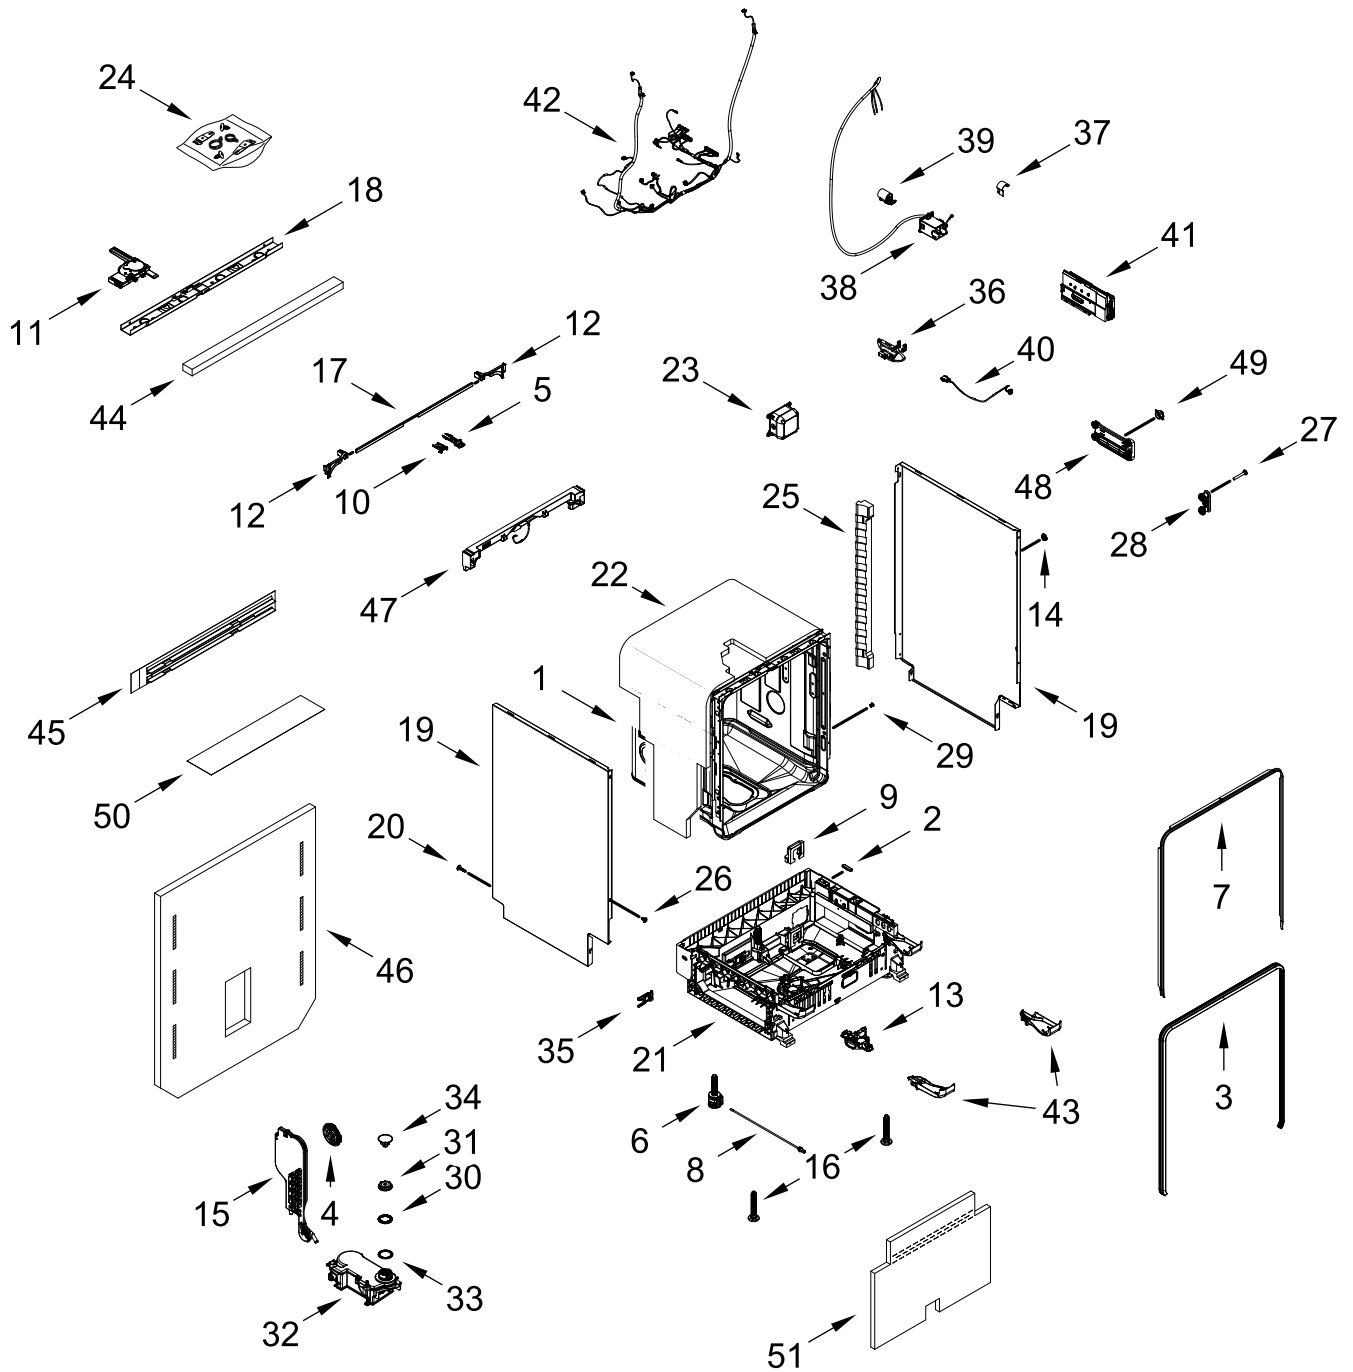

TUB AND FRAME PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Tub (Not Serviced)	19	W11355600	Side Panel (Left)	38	W11578108	Power Cord Assembly
2	W11671752	Pad, Tub Support		W11355598	Side Panel (Right)	39	W11418782	Filter, RFI
3	W11658880	Gasket, Tub	20	W10986499	Screw	40	W11646878	Jumper Harness, Service Port
4	W11236521	Nut, Air Break	21	W11690567	Assembly, Base	41	W11696403	Control, Electronic
5	W11314779	Strike, Latch	22	W11564606	Shield, Tub Sound	42	W11609316	Wiring Harness, Main
6	W11316238	Assembly, Leveling Leg (Rear)	23	W11643567	Assembly, Junction Box	43	W11684708	Channel, Overflow (Left)
7	W11554391	Retainer, Tub Gasket	24	W11696041	Miscellaneous Parts Bag		W11684709	Channel, Overflow (Right)
8	W11325471	Rod, Foot Adjustment (Rear)	25	W11525808	Spacer, Side Panel	44	W11676843	Foam, Crossbar
9	W11668893	Holder, Damper	26	W11350847	Screw	45	W11673775	Kit, Side Cover Installation
10	W11317043	Cover, Door Opening	27	W10941972	Screw	46	W11600452	Insulation, Back
11	W11590760	Assembly, Door Opening	28	W11345595	Tub Mount, Upper Rack	47	W11664579	Crossbar, Upper Rear
12	W11316692	Cover, Tub Corner (Left)	29	W11656505	Button, Tub	48	W11315145	Tub Mount, Third Level Rack (Left)
	W11316688	Cover, Tub Corner (Right)	30	W11227921	Nut, Softner		W11315146	Tub Mount, Third Level Rack (Right)
13	W11602936	Float Switch	31	W11227934	Cap, Salt			
14	W11321022	Plug, Tub	32	W11546882	Softener, Water			
15	W11568183	Air Break	33	W11224085	Seal, Softener	49	W11630670	Nut, Tub
16	W11325130	Leg, Leveling (Front)	34	W11509486	Funnel, Salt	50	W11676404	Strip, Anti-Condensation
17	W11317036	Cover, Top	35	W11686061	Plate, In/Out Hoses	51	W11626034	Insulation, Floor
18	W11306174	Crossbar, Front Frame	36	W11545951	Jumper, RFI to Control			
			37	W10943118	Spring, Grounding			


PUMP, WASHARM AND MOTOR PARTS

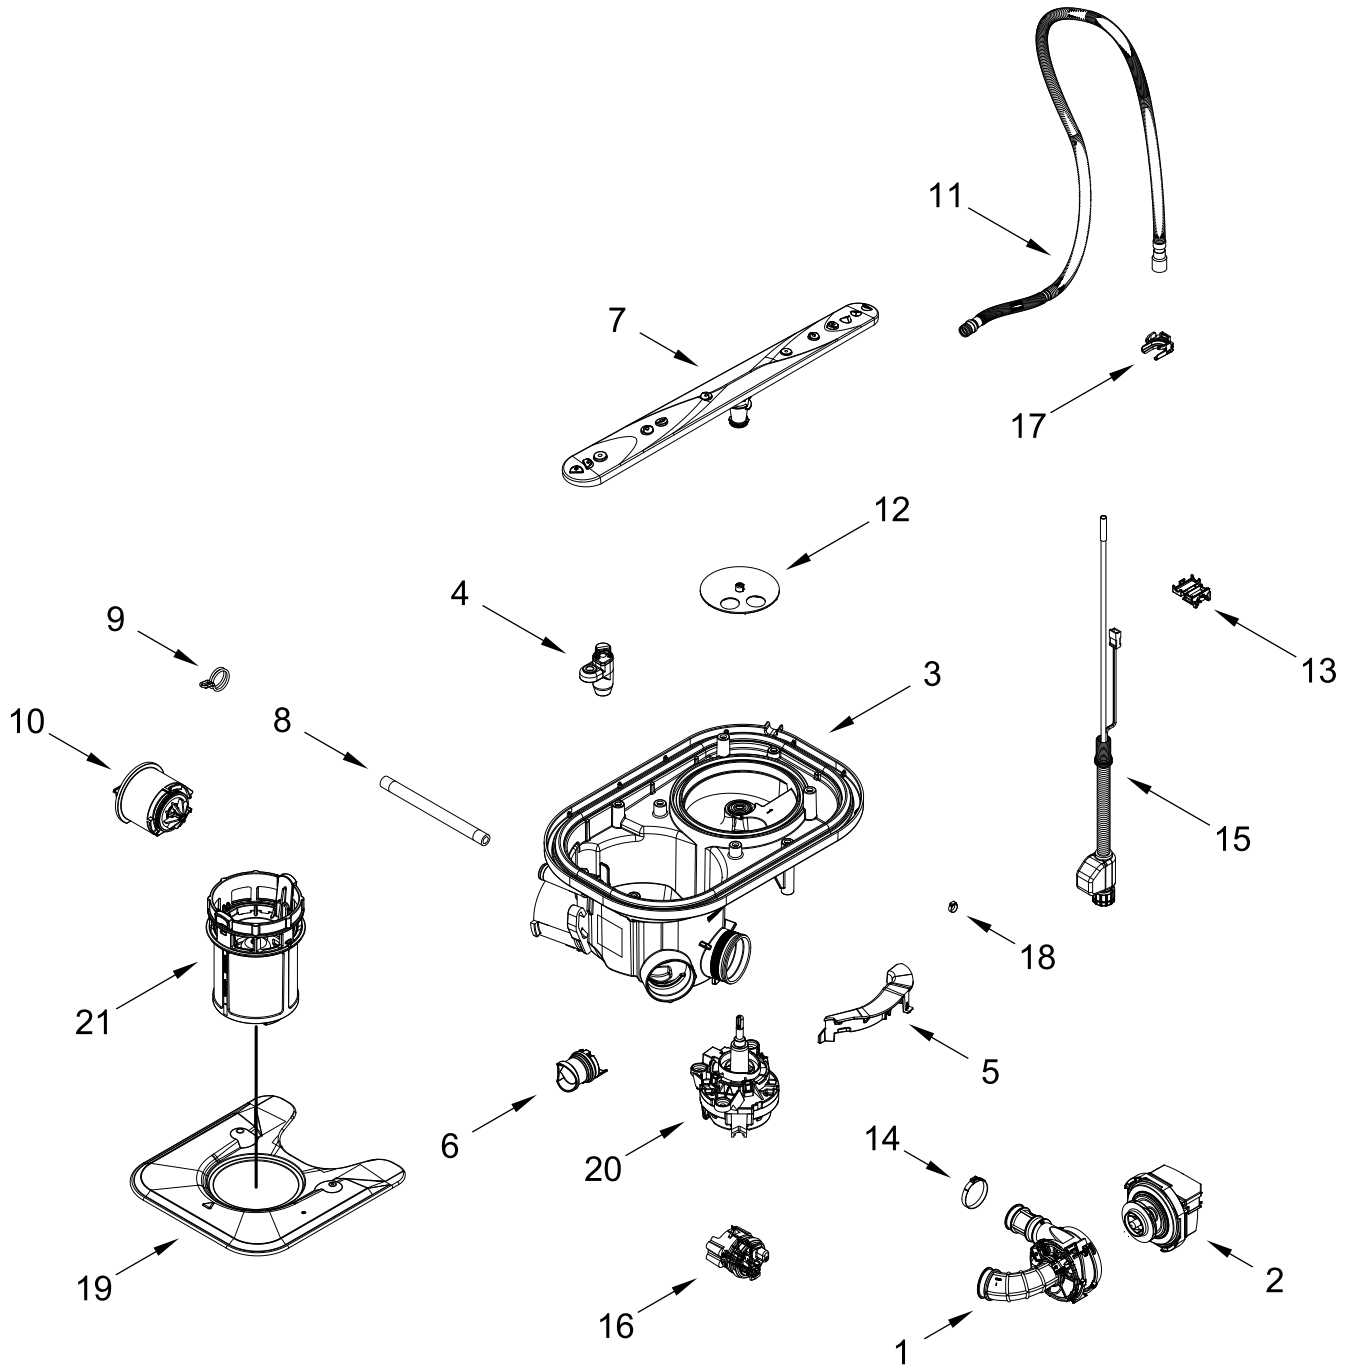

PUMP, WASHARM AND MOTOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11630727	Heater, Pump	9	W10096851	Clamp, Hose	17	W11626817	Clip, Hose
2	W11630725	Motor, Pump	10	W11631981	Motor, Drain	18	W11015323	Clamp, Hose
3	W11560668	Sump (includes Seal)	11	W11586395	Hose, Drain	19	W11445183	Grate
4	W11559823	Drain Vent Assembly	12	W11175586	Disc, Diverter	20	W11543924	Diverter Valve Motor
5	W11560657	Diffuser, Inlet	13	W10942827	Housing, Connector	21	W11559846	Filter
6	W11560834	Check Valve, Drain	14	W11122851	Clamp, Hose			
7	W11528063	Wash Arm Assembly	15	W11551555	Hose, Inlet			
8	W11008962	Hose, Pump Inlet	16	W11126174	Indicator, Optical Wash			


UPPER WASH AND RINSE PARTS

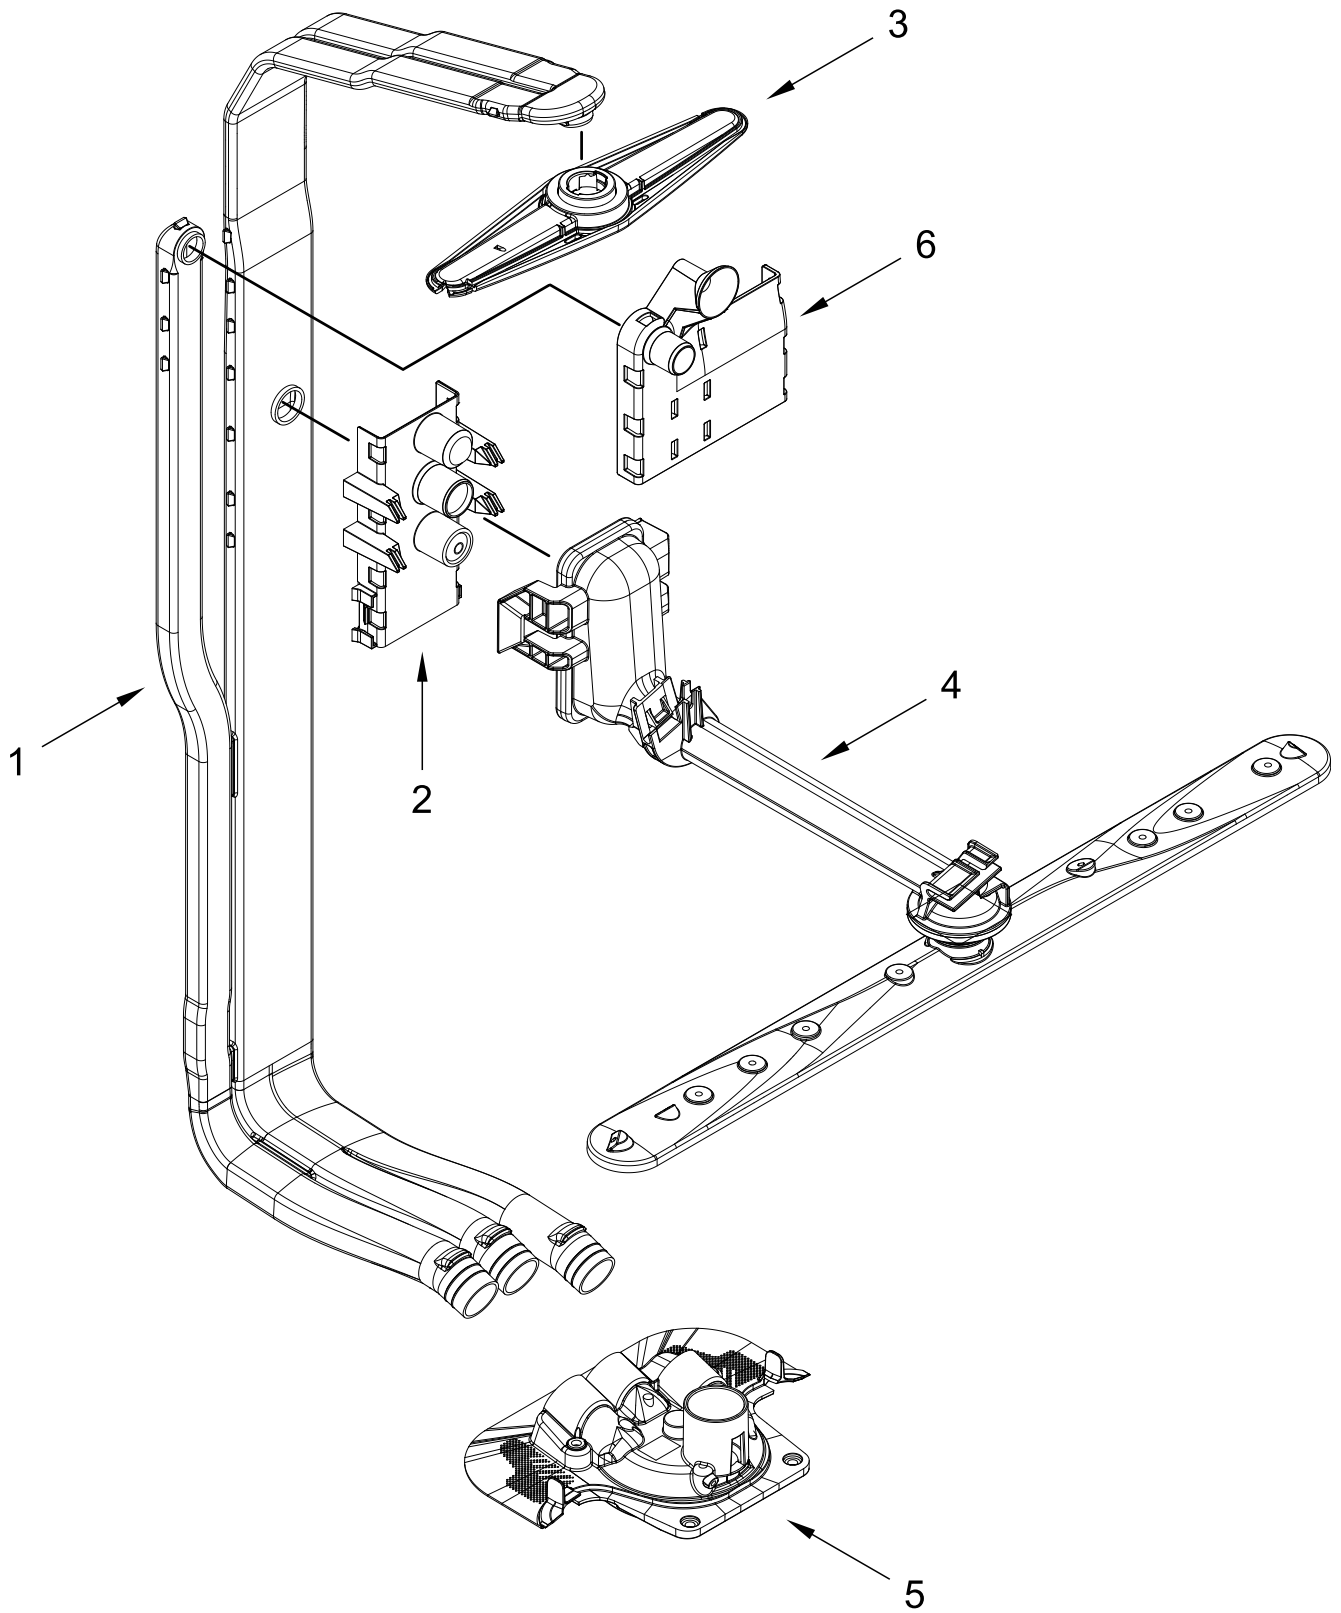

UPPER WASH AND RINSE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11668592	Feed Tube Assembly	3	W11522201	Sprayarm, Third Level	5	W11602499	Cover, Diverter
2	W11522213	Retainer, Docking (2nd Level)	4	W11680190	Upper Sprayarm Assembly	6	W11221214	Retainer, Docking (3rd Level)


UPPER RACK AND TRACK PARTS

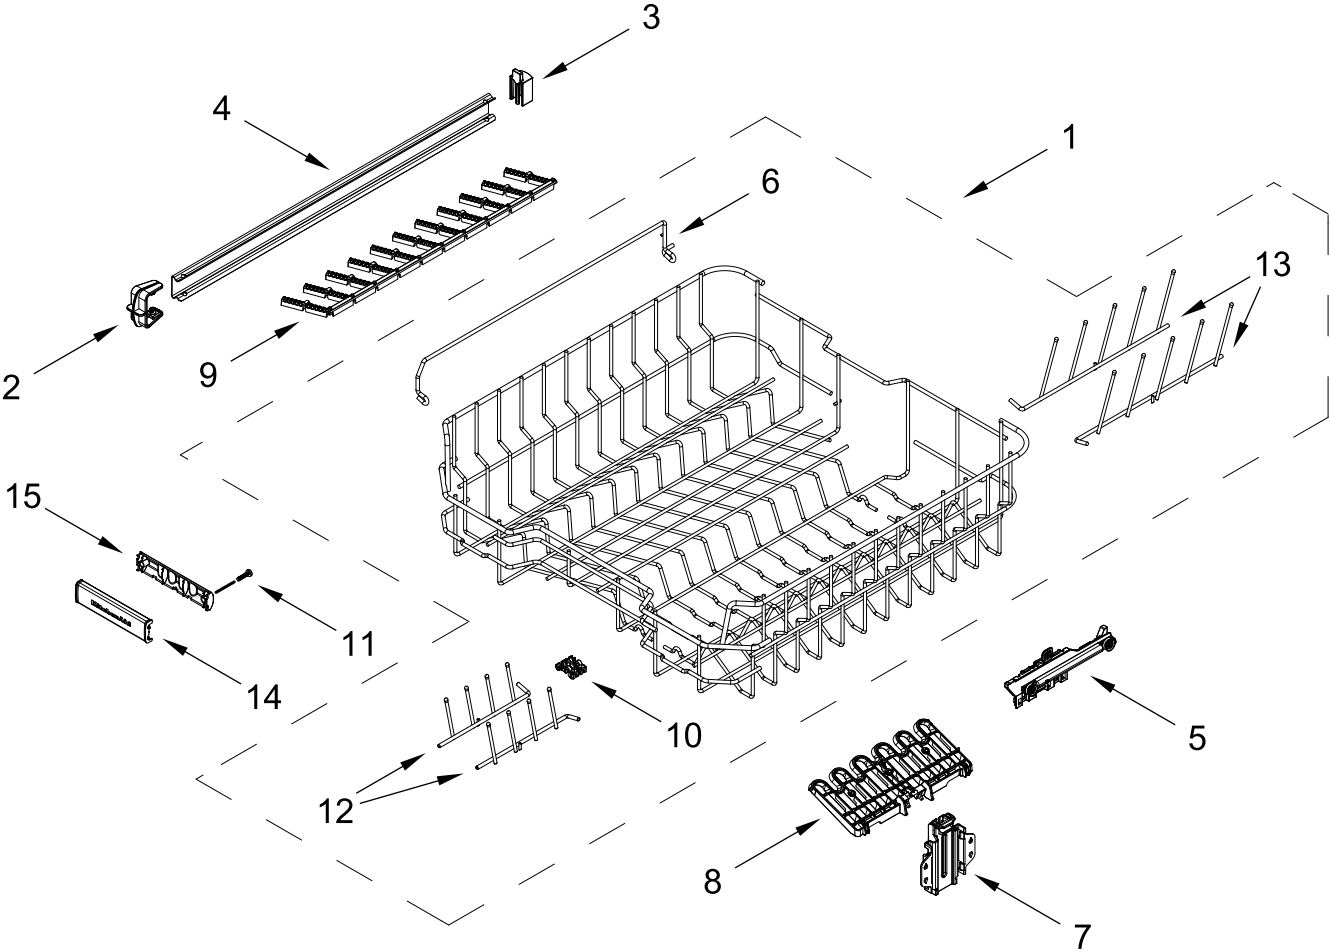

UPPER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11534668	Dishrack, Upper	7	W11592682	Clip, Cup Shelf	13	W11534672	Tine Row, Back (Left)
2	W11315114	Track Stop, Front	8	W11592896	Cup Shelf		W11534677	Tine Row, Back (Right)
3	W11315116	Track Stop, Rear	9	W11538488	Tine Row, Fold Down	14	W11590247	Handle, Front
4	W10884045	Track, Dishrack	10	W11315981	Clip, Tine Row	15	W11590235	Handle, Rear
5	W11561903	Adjustment Assembly (Left)	11	W11337336	Screw			
	W11561902	Adjustment Assembly (Right)	12	W11598462	Tine Row, Front (Left)			
6	W11356045	Support, Tine Row		W11598463	Tine Row, Front (Right)			


LOWER RACK PARTS

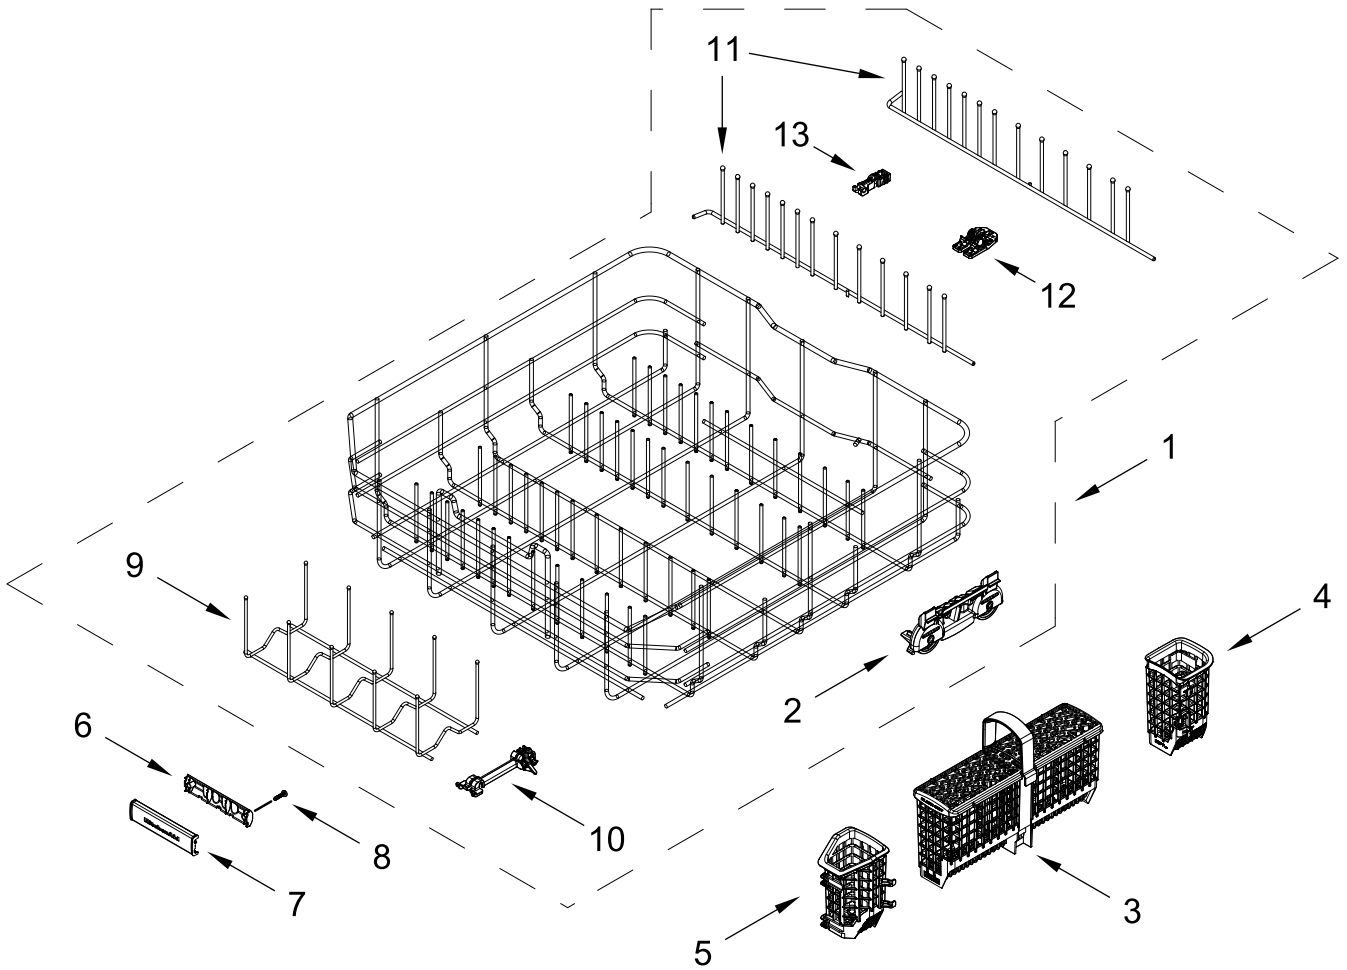

LOWER RACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11626547	Dishrack, Lower	6	W11590235	Handle, Rear	11	W11389056	Tine, Folddown (Rear)
2	W11543650	Wheel & Transport Assembly	7	W11590247	Handle, Front		W11385226	Tine, Folddown (Front)
3	W11629677	Silverware Basket Assembly	8	W11337336	Screw	12	W11545635	Clip, Positioning
4	W11634637	Utensil Basket (Rear)	9	W11543710	Sliding Tine, Bowl	13	W11545636	Clip, Retainer
5	W11634635	Utensil Basket (Front)	10	W11523448	Clip, Sliding Tine			

THIRD LEVEL RACK AND TRACK PARTS

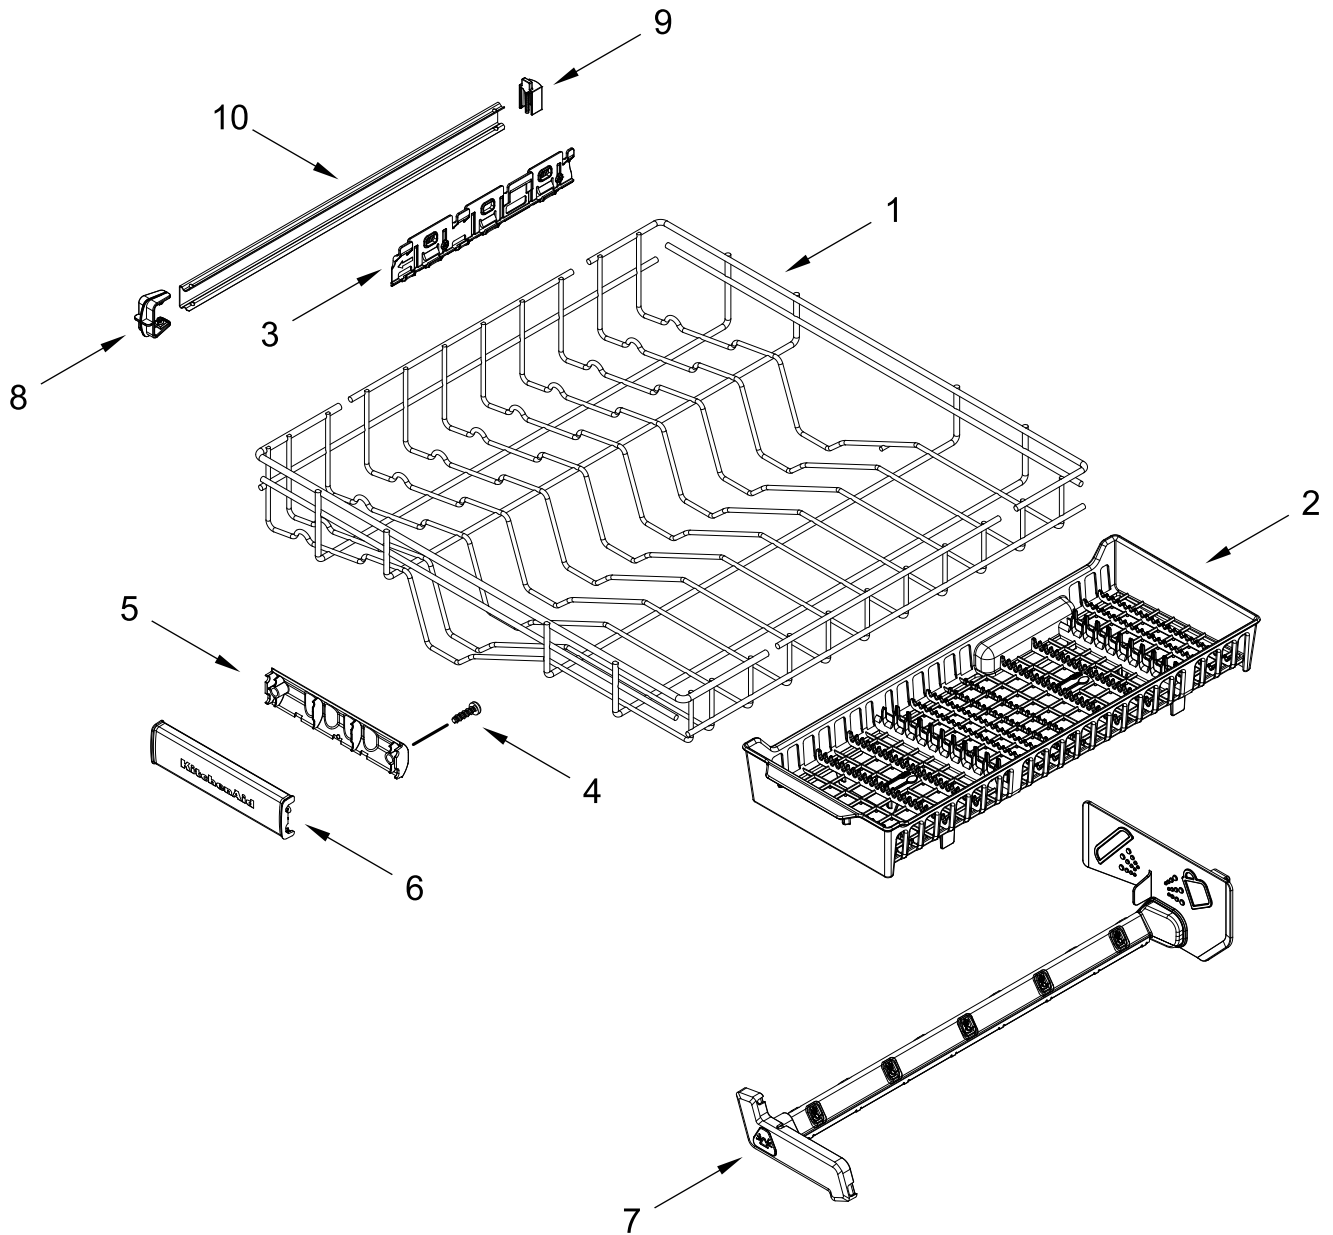

THIRD LEVEL RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11543809	Rack, Third Level	4	W11337336	Screw	9	W11315116	Track Stop, Rear
2	W11545952	Silverware Tray	5	W11590235	Handle, Rear	10	W10884045	Track, Dishrack
3	W11525717	Mount, Dishrack (Left)	6	W11590245	Handle, Front			
	W11525715	Mount, Dishrack (Right)	7	W11528590	Washarm Assembly			
			8	W11315114	Track Stop, Front			