



**KitchenAid®**

**30" ELECTRIC DOUBLE OVEN RANGE**

**MODELS:**

KFED500EBS05 (Black Stainless)


# COOKTOP PARTS

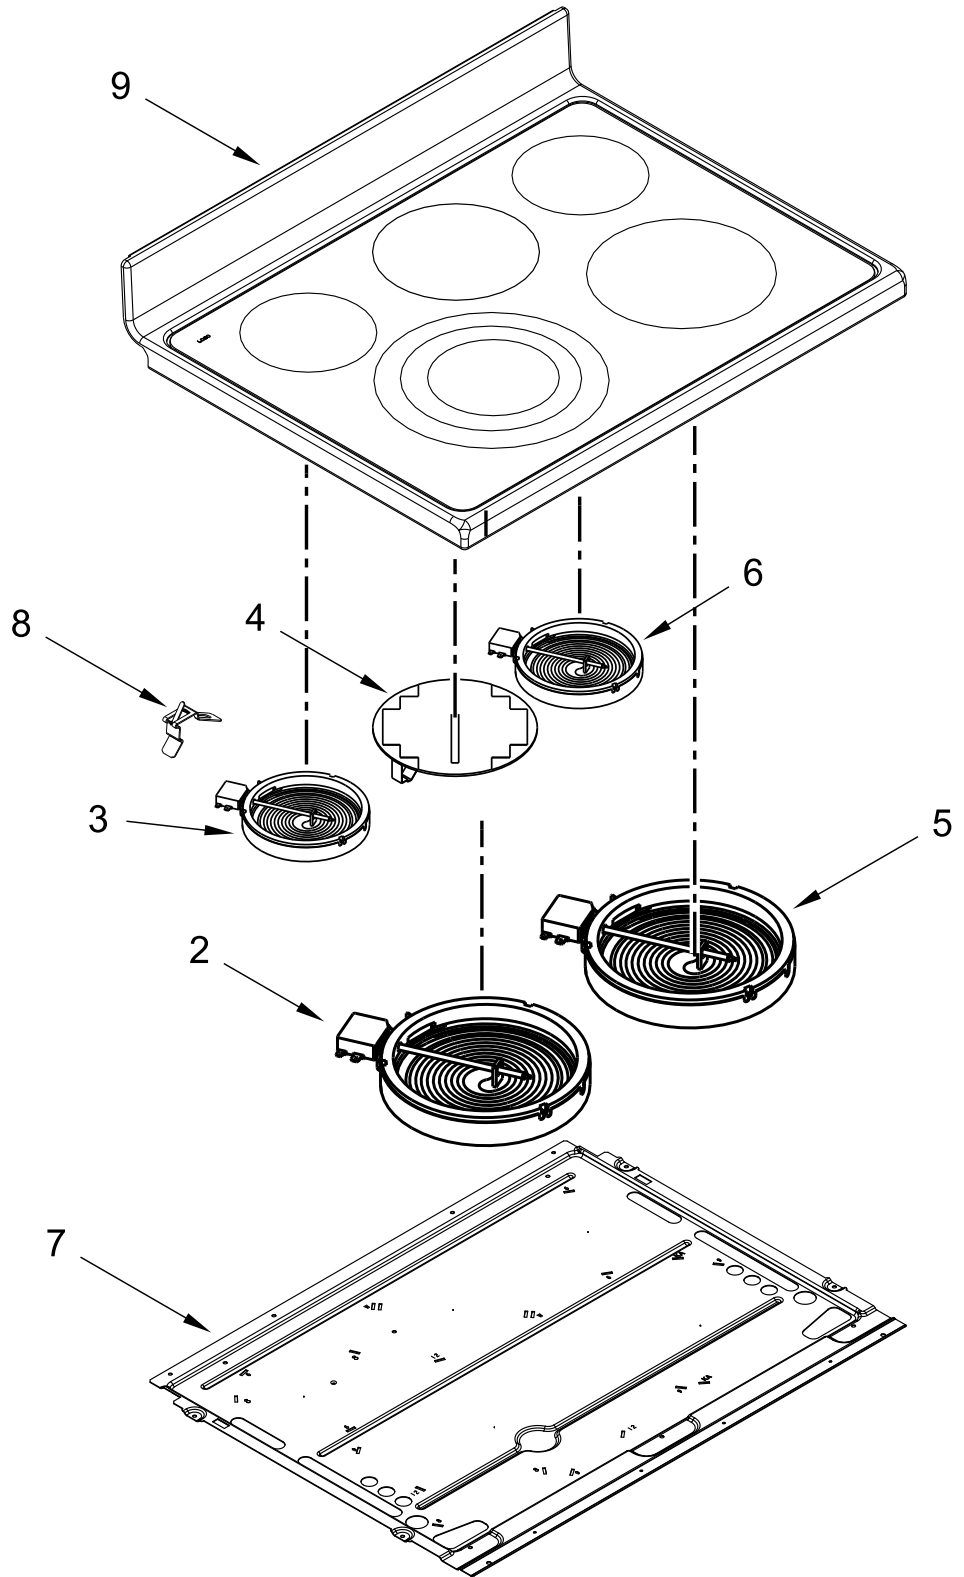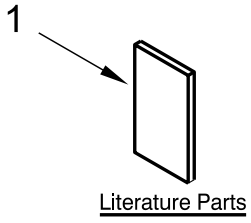

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9		Cooktop
	W11427490	Owner's Manual		W10687990	Black
	W11430269	Quick Start Guide			FOLLOWING PARTS NOT ILLUSTRATED
	W11325874	Tech Sheet		W11171888	Harness, Main
2	W10670279	Element (2700W) (Left Front)		W11172425	Harness, Infinite Switch (Left)
3	W10270604	Element (700W) (Left Rear)		W11172427	Harness, Infinite Switch (Right)
4	W10799048	Element, Warm Zone (Center Rear)		W11172428	Harness, EOL (DOFSR)
5	W10251108	Element (3200W) (Right Front)		W11172531	Harness, Sensor & Locks
6	8273994	Element (1200W) (Right Rear)		W11171874	Harness, Cooktop
7	W10260946	Panel, Element Support		7101P027-60	Screw, Ground
8	W10225448	Spring, Element		7401P157-60	Block, Bare Wire Adapter
				8019P013-60	Clip, Wire Lock


# CONTROL PANEL PARTS

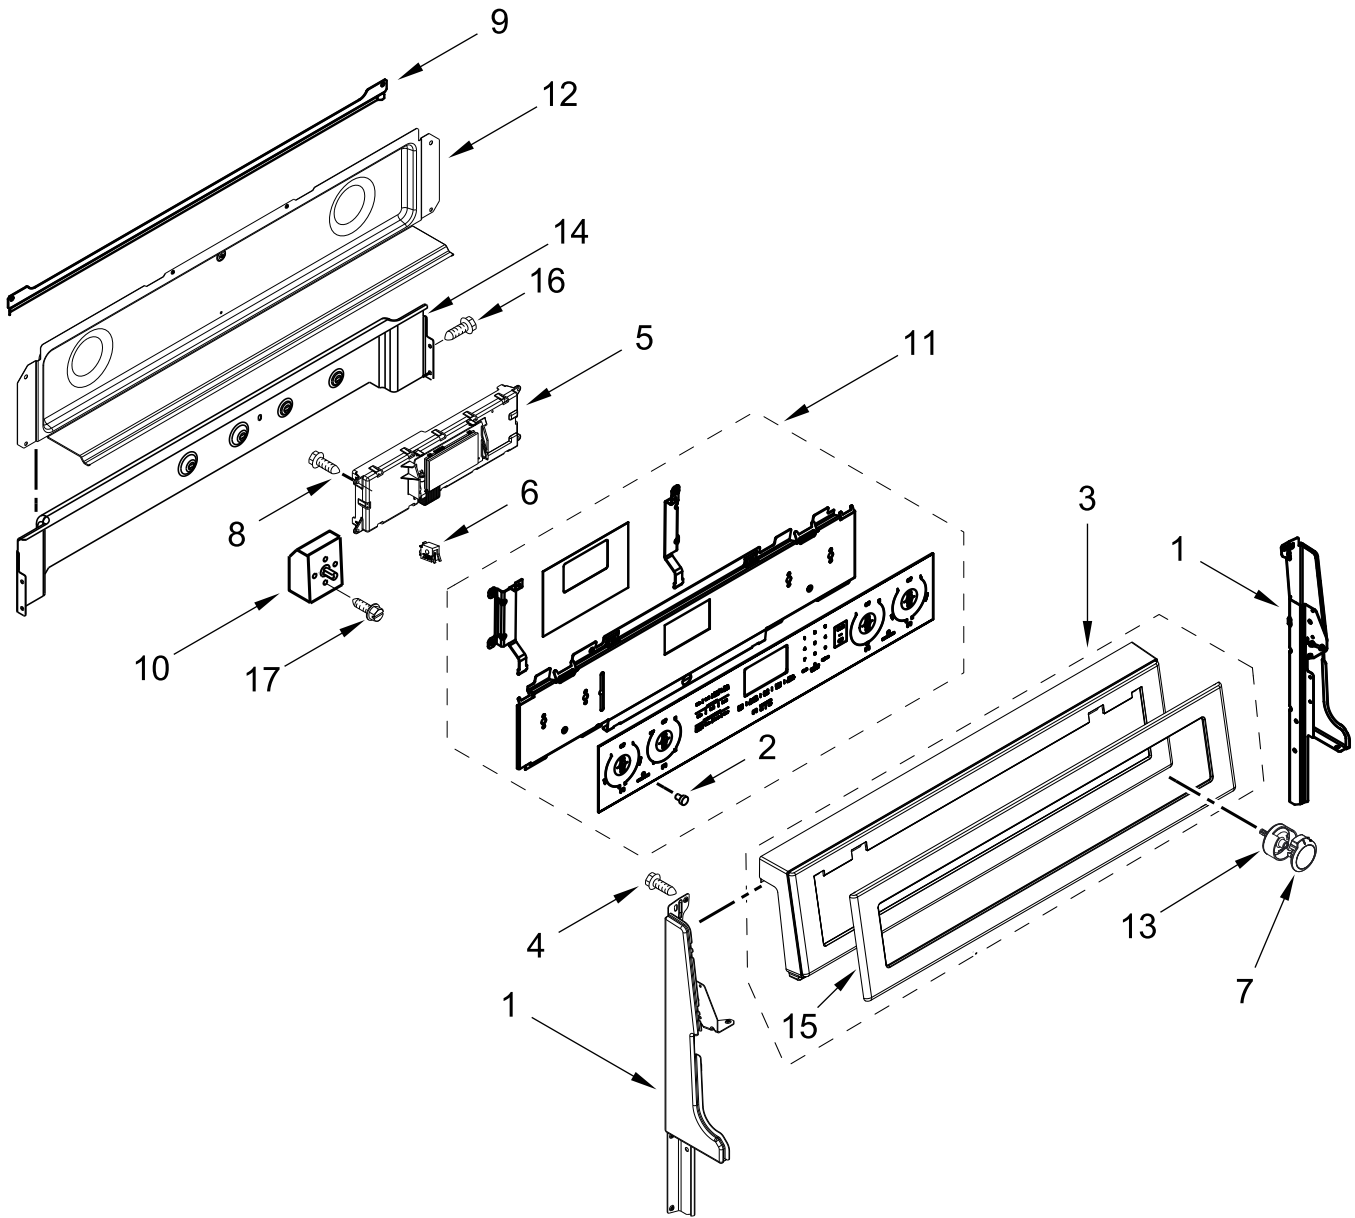

# CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard	10	W10296657	Switch, Infinite (Left Front)	14	W10278697	Shield, Vent
	W10319109	Black (Left)		W10295048	Switch, Infinite (Left Rear)	15		Skin, Control Panel (Not Serviced)
	W10319111	Black (Right)		W10312185	Switch, Infinite (Right Front)	16	9780274	Screw
2	3196068	Lens, Indicator		7403P373-60	Switch, Infinite (Right Rear)	17	W10674068	Screw
3		Console						
	W11024860	Black Stainless	11		Assembly, User Interface (Includes Light Feature)			
4	7101P633-60	Screw (Black)		W11527486	Black			
5	W11515093	Control, Maxwell Electronic	12	W10776098	Cover, Backguard			
6	7407P136-60	Light, Indicator	13	W10645811	Bezel, Knob			
7		Knob						
	W10823529	Stainless						
8	7101P434-60	Screw						
9	W10299338	Shield, Wire Cover						


# CHASSIS PARTS

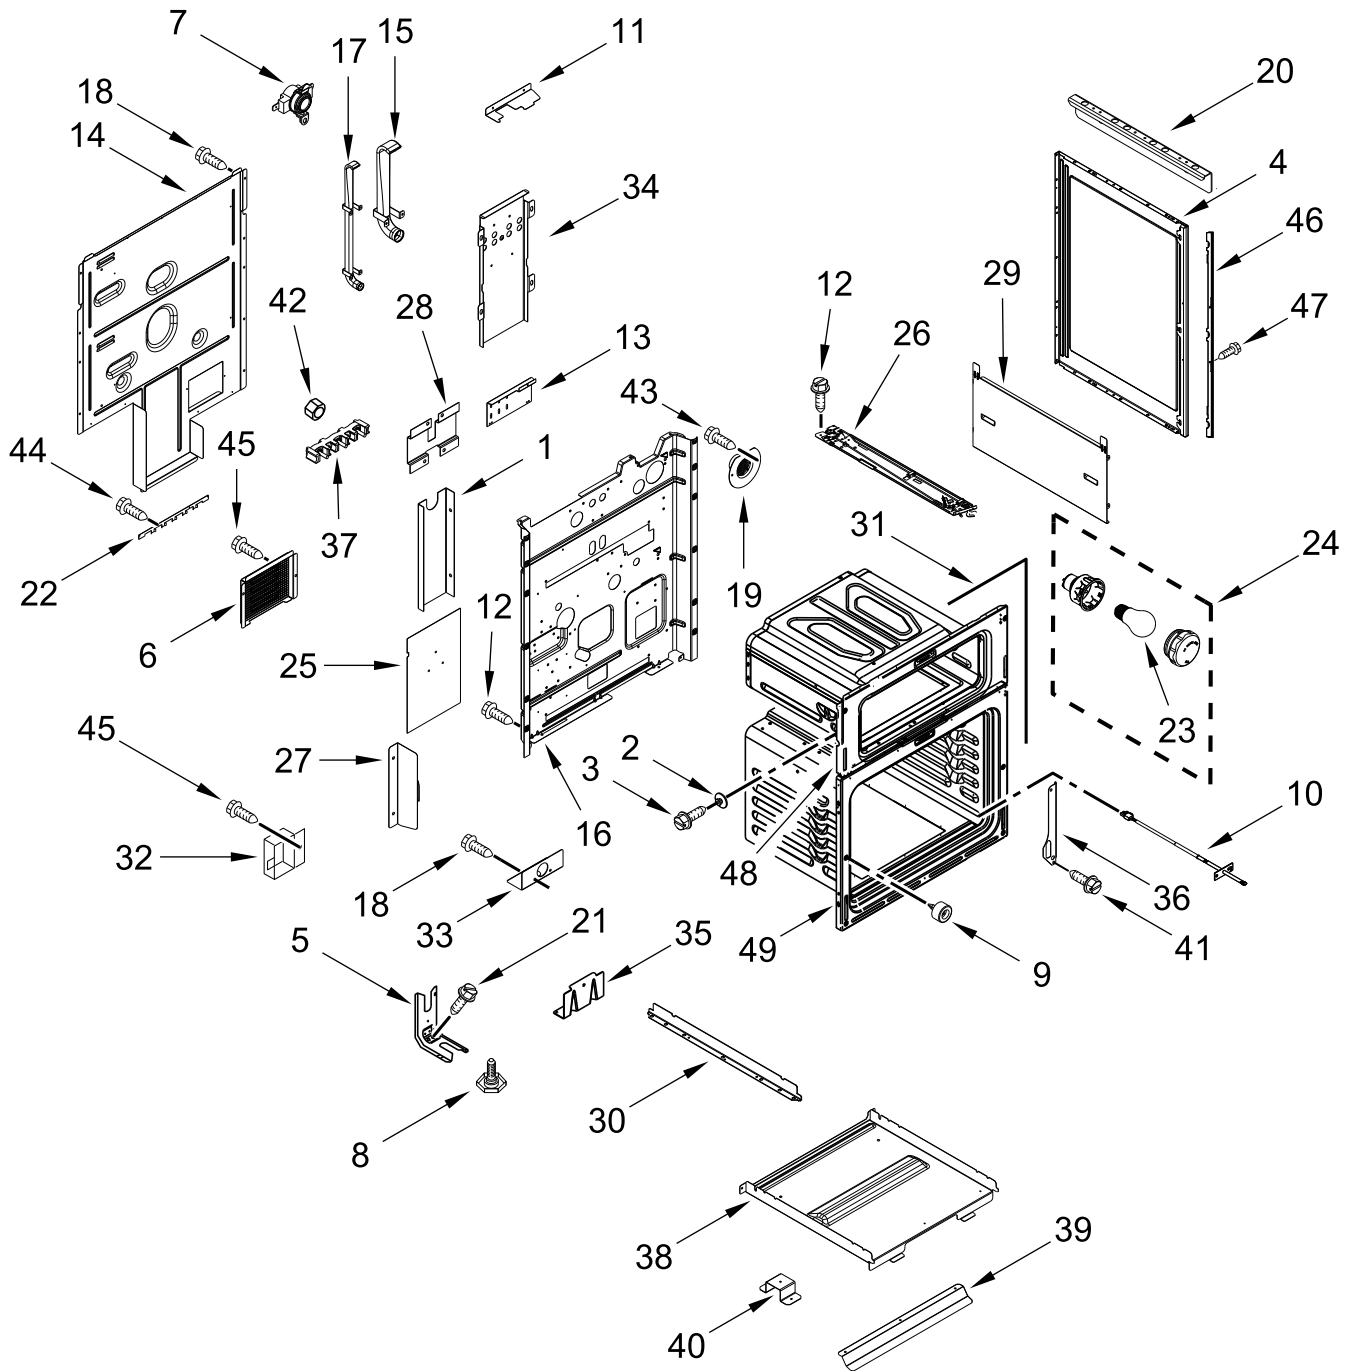

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10332459	Shield, Heat	22	8036P012-60	Shield, Power Cord	39	W10253470	Bracket, Retaining
2	W11479123	Spacer, Side Panel	23	311255	Bulb, Oven Light	40	W10260545	Clip, Retaining
3	7101P642-60	Screw	24	W11544370	Light Assembly	41	4449743	Screw
4		Panel, Side	25	W10311987	Shield, Cord (Right)	42	3400029	Nut
	W11477310	Black	26	W10683517	Lock, Rear Mount	43	W10720084	Screw
5	3801F656-51	Bracket, Anti-Tip	27	W10268560	Cover, Wire Lower	44	489290	Screw
6	W10312612	Cover, Access (Terminal Block)	28	7003P104-60	Insulator, Heat Shield	45	7101P338-60	Screw
7	7403P899-60	Switch, High Limit	29	W10538516	Shield, Side Insulation	46	W11453994	Bracket, Rubber Barrier
8	7101P507-60	Foot, Leveler	30	W10357697	Bracket, Side Panel	47	7101P633-60	Screw (Black)
9	W10105790	Bumper & Screw	31	W11491754	Gasket, Oven Door (Upper)	48	W11515375	Front, Main (Upper)
10	7430P044-60	Sensor, Oven				49	W11515372	Front, Main (Lower)
11	W10268559	Cover, Lower Wire		W11491753	Gasket, Oven Door (Lower)			FOLLOWING PARTS NOT ILLUSTRATED
12	7101P426-60	Screw					W10271637	Insulation, Floor
13	W10332449	Shield, Cord	32	8285593	Cover, Connector		W11462751	Insulation, Wrapper
14	W10261386	Cover, Main Wire	33	W10190166	Bracket, Power Supply		W10322111	Insulation, Back
15	W10337391	Tube, Vent (Upper)	34	W10261388	Bracket, Terminal		W10204079	Insulation, Middle
16	W10668730	Back, Main	35	W10863342	Support, Lower Oven		W10204085	Insulation, Main Front Strip
17	W10323793	Tube, Vent (Lower)	36	W10410463	Cover, Hinge (Left)		W11463064	Insulation, Hidden Bake Pouch
18	7101P434-60	Screw		W10410461	Cover, Hinge (Right)			
19	W10322408	Adapter, Vent Tube	37	7401P039-60	Block, Terminal			
20	W10319087	Bracket, U Channel	38	W10548601	Pan, Element			
21	7101P485-60	Screw, Anti-Tip Kit						

# INTERNAL OVEN PARTS

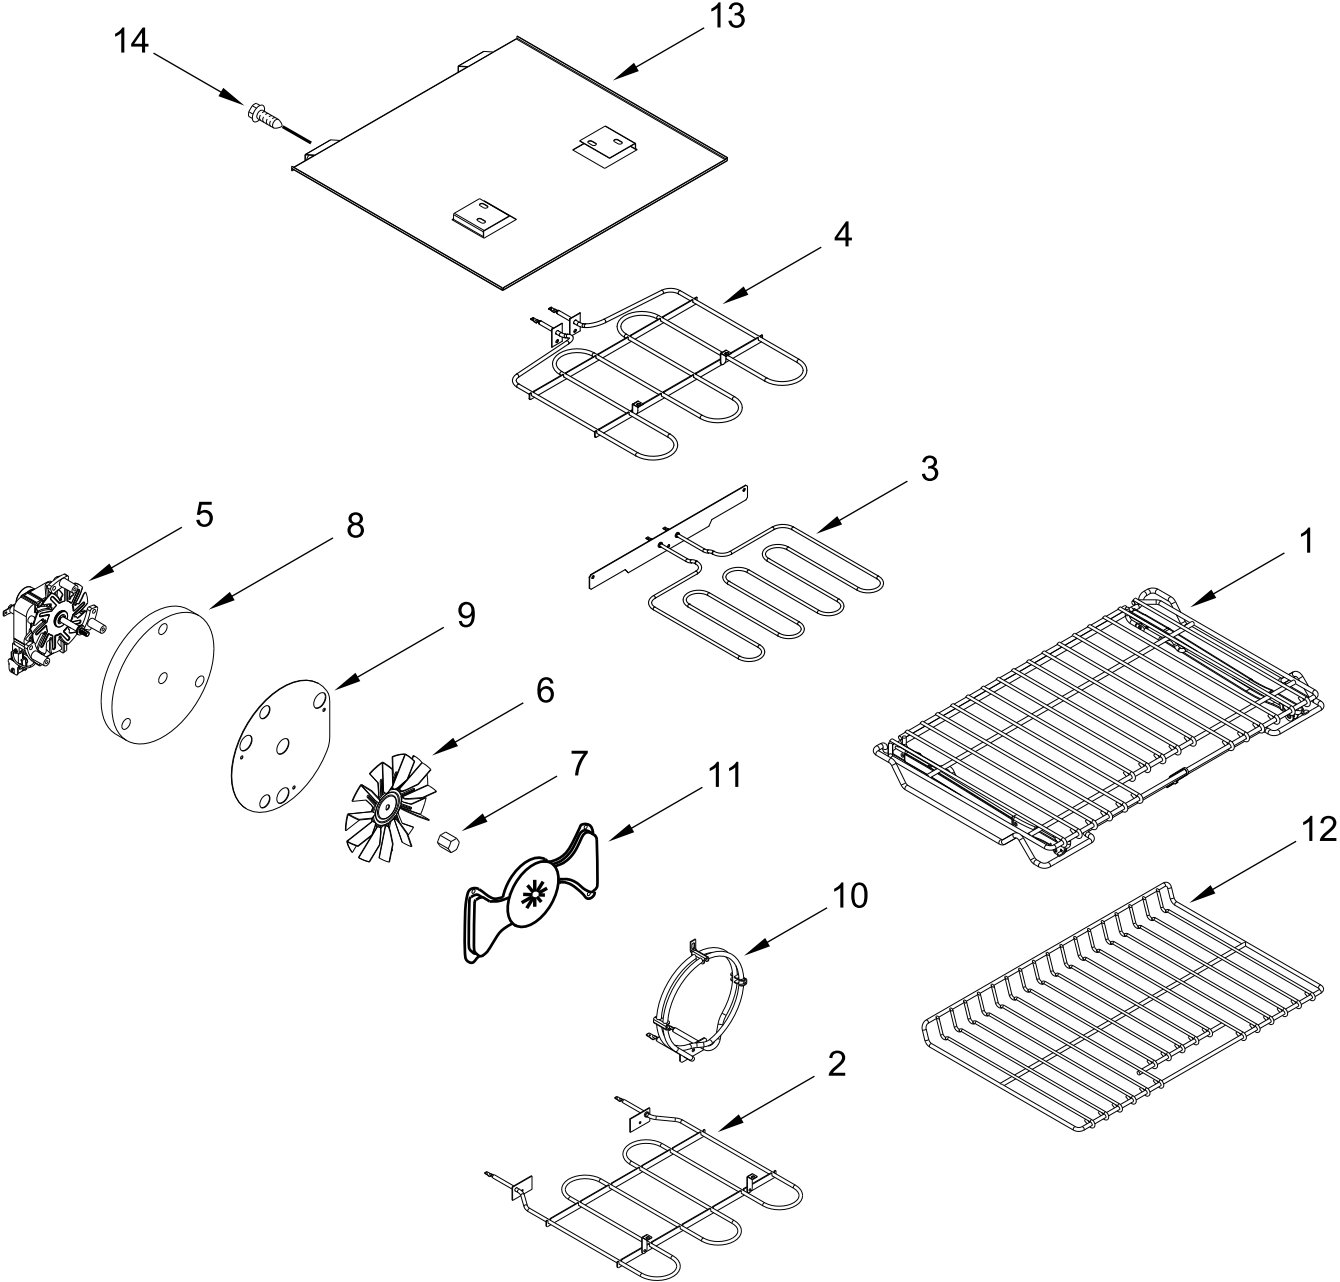




# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10570870	Rack, Oven (Telescoping)	5	W11190725	Motor, Convection	11	W10160868	Baffle, Convection
2	W10249979	Element, Broil (Lower)	6	W10631503	Blade, Fan	12	W10570887	Rack, Oven
3	W11095935	Bake Element (Upper & Lower)	7	W10631504	Nut, Acorn (LH)	13	W10319762	Shield, Broil
4	W10317476	Element, Broil (Upper)	8	W10274268	Insulation, Convection Motor	14	7101P434-60	Screw
			9	W10339476	Plate, Insulation			
			10	W10271639	Element, Convection (240VAC)			


# UPPER DOOR PARTS

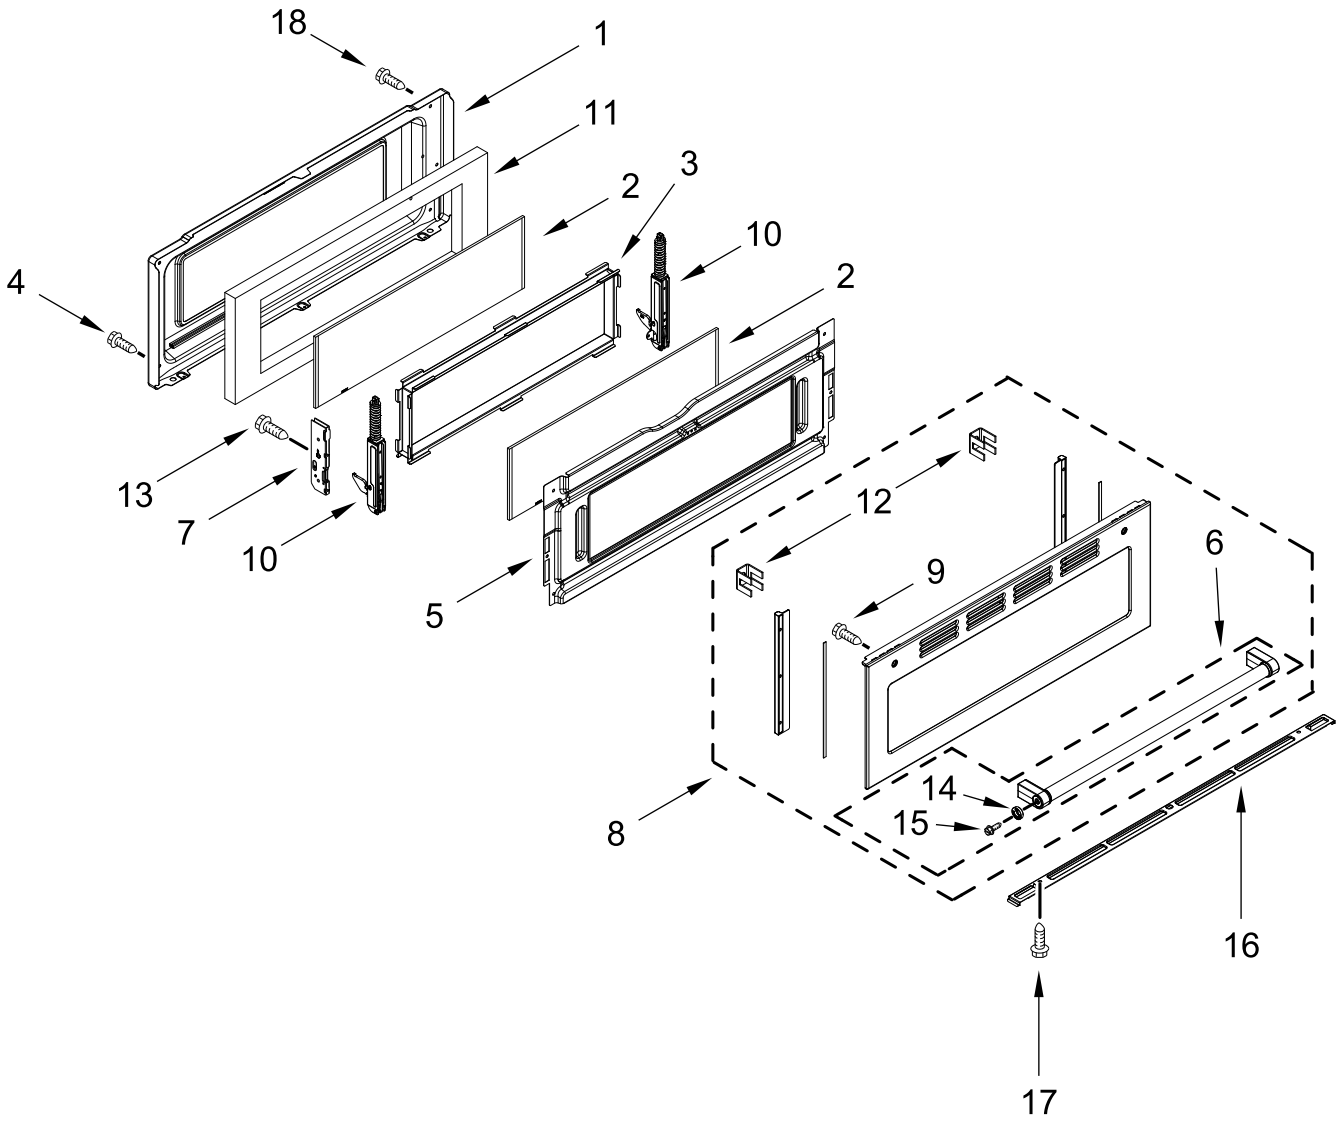

# UPPER DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11051040	Lining, Door	7	W10289077	Receiver, Hinge	12	W10575917	Spacer, Vent Trim
2	W11099272	Glass, Inner	8		Assembly, Door	13	W10031780	Screw
3	W10272708	Frame, Glass		W10861414	Black Stainless	14	W10551026	Medallion, Handle
4	W10292297	Screw	9	W10480830	Screw	15	W10656499	Screw
5	W10485723	Retainer, Insulation	10	W10485733	Hinge, Door (Left)	16	W11448964	Bracket, Door Trim
6		Assembly, Handle		W10485732	Hinge, Door (Right)	17	W10284411	Screw with Washer
	W11305107	Black	11	W10321271	Insulation, Door	18	W10317886	Screw

# LOWER DOOR PARTS

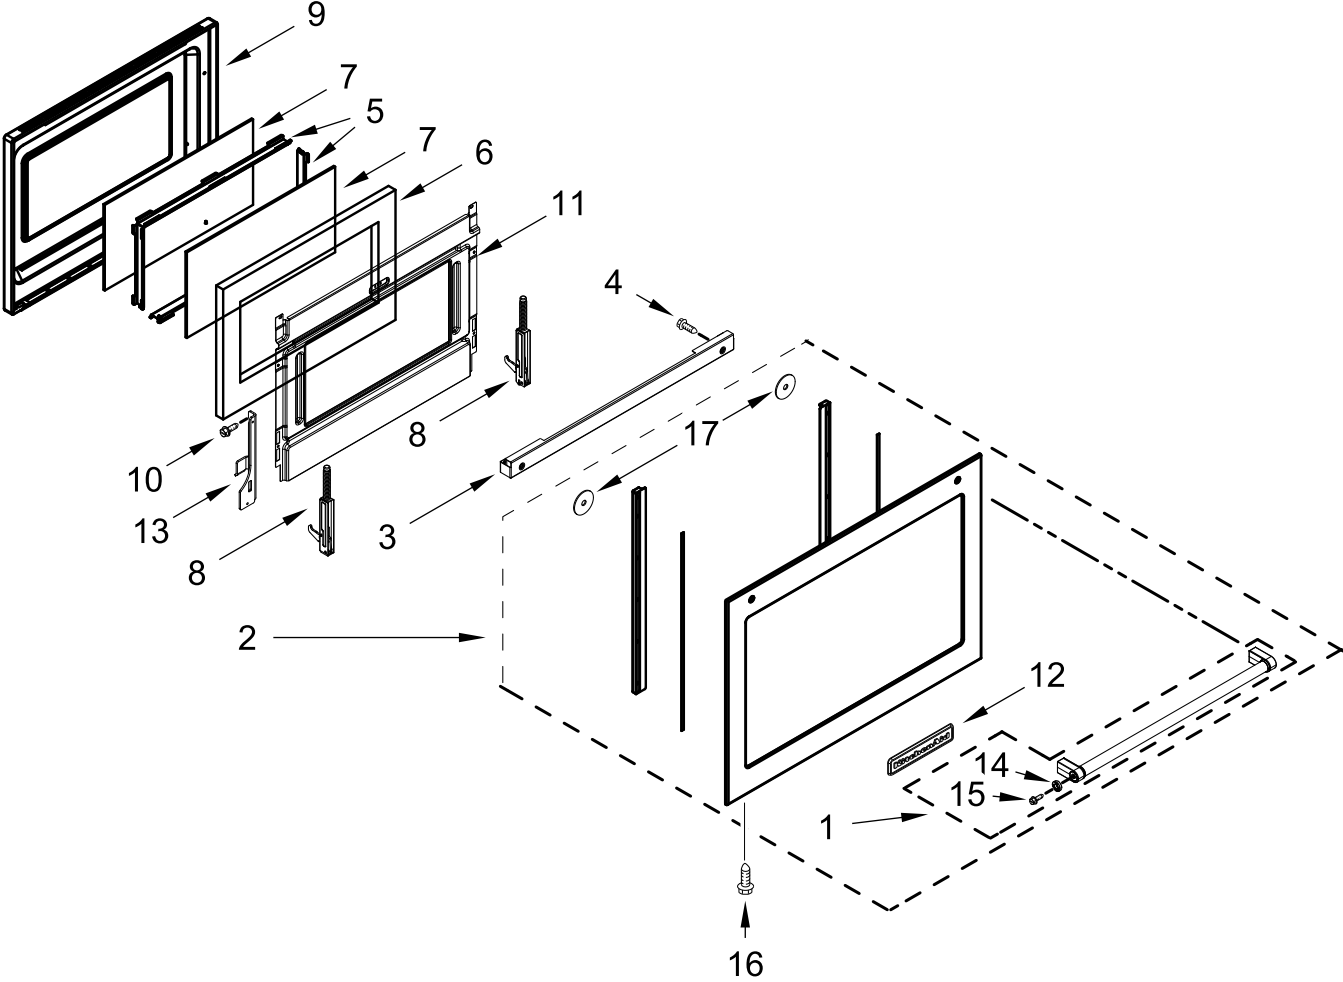

# LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Handle	7	9757706	Glass, Inner	13	W10272329	Receiver (Left)
	W11305107	Black	8	W10335434	Hinge, Door (Left)		W10272328	Receiver (Right)
2		Assembly, Door		W10335433	Hinge, Door (Right)	14	W10551026	Medallion, Handle
	W11528017	Black Stainless	9	W10272698	Lining, Door	15	W10656499	Screw
3	W10575689	Bracket, Handle	10	4449040	Screw	16	W10284411	Screw with Washer
4	W10480830	Screw	11	W10340464	Retainer, Insulation	17	7109P084-60	Washer, Fiber
5	W10272594	Frame, Glass	12	W10518672	Badge			
6	W10321285	Insulation, Door						

# OPTIONAL PARTS (NOT INCLUDED)

## PAIN, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## PAIN, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit/Bisque
	285006	Black
	350956	Almond
	350938	Gray Primer
	350942	White Primer

## ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning