

Accessories use tips

Placing accessories on the correct level will achieve better cooking performance. See the recipes on the online control guide.

Accessory	Functions	Level
	<input checked="" type="checkbox"/> Air fry <input checked="" type="checkbox"/> Dehydrate	1 1
	<input checked="" type="checkbox"/> Toast <input checked="" type="checkbox"/> Bake <input checked="" type="checkbox"/> Broil	0 / 1 0 / 1 0 / 1 / 2
	<input checked="" type="checkbox"/> Air baking <input checked="" type="checkbox"/> Roast <input checked="" type="checkbox"/> Broil <input checked="" type="checkbox"/> Bake	1 1 0 / 1 / 2 0 / 1

Level:



Hot Caliente



Nivel:



IMPORTANT: Do not use included accessories or other metal cookware during microwave functions, such as reheat, defrost, soften, melt, keep warm and cook.

IMPORTANTE: No use los accesorios incluidos ni otros utensilios de cocina metálicos con las funciones de microondas, como recalentar, descongelar, ablandar, derretir, mantener caliente y cocinar.

* When cooking oily or juicy foods, place an oven-proof baking plate on the oven bottom to catch drippings.

Consejos de uso de accesorios

Colocar los accesorios en el nivel correcto logrará un mejor rendimiento de cocción. Consulte las recetas en la guía de control en línea.

Accesorio	Funciones	Nivel
	<input checked="" type="checkbox"/> Freír con aire <input checked="" type="checkbox"/> Deshidratar	1 1
	<input checked="" type="checkbox"/> Tostar <input checked="" type="checkbox"/> Hornear <input checked="" type="checkbox"/> Asar a la parrilla	0 / 1 0 / 1 0 / 1 / 2
	<input checked="" type="checkbox"/> Horneado al aire <input checked="" type="checkbox"/> Asar <input checked="" type="checkbox"/> Asar a la parrilla <input checked="" type="checkbox"/> Hornear	1 1 0 / 1 / 2 0 / 1

* Cuando cocine alimentos aceitosos o jugosos, coloque una placa para hornear resistente en la parte inferior del horno para recoger las gotas.

P/N : W11582086B