


KitchenAid®

GAS RANGE

MODELS:

KSGG700ESS7 (Stainless)


COOKTOP PARTS

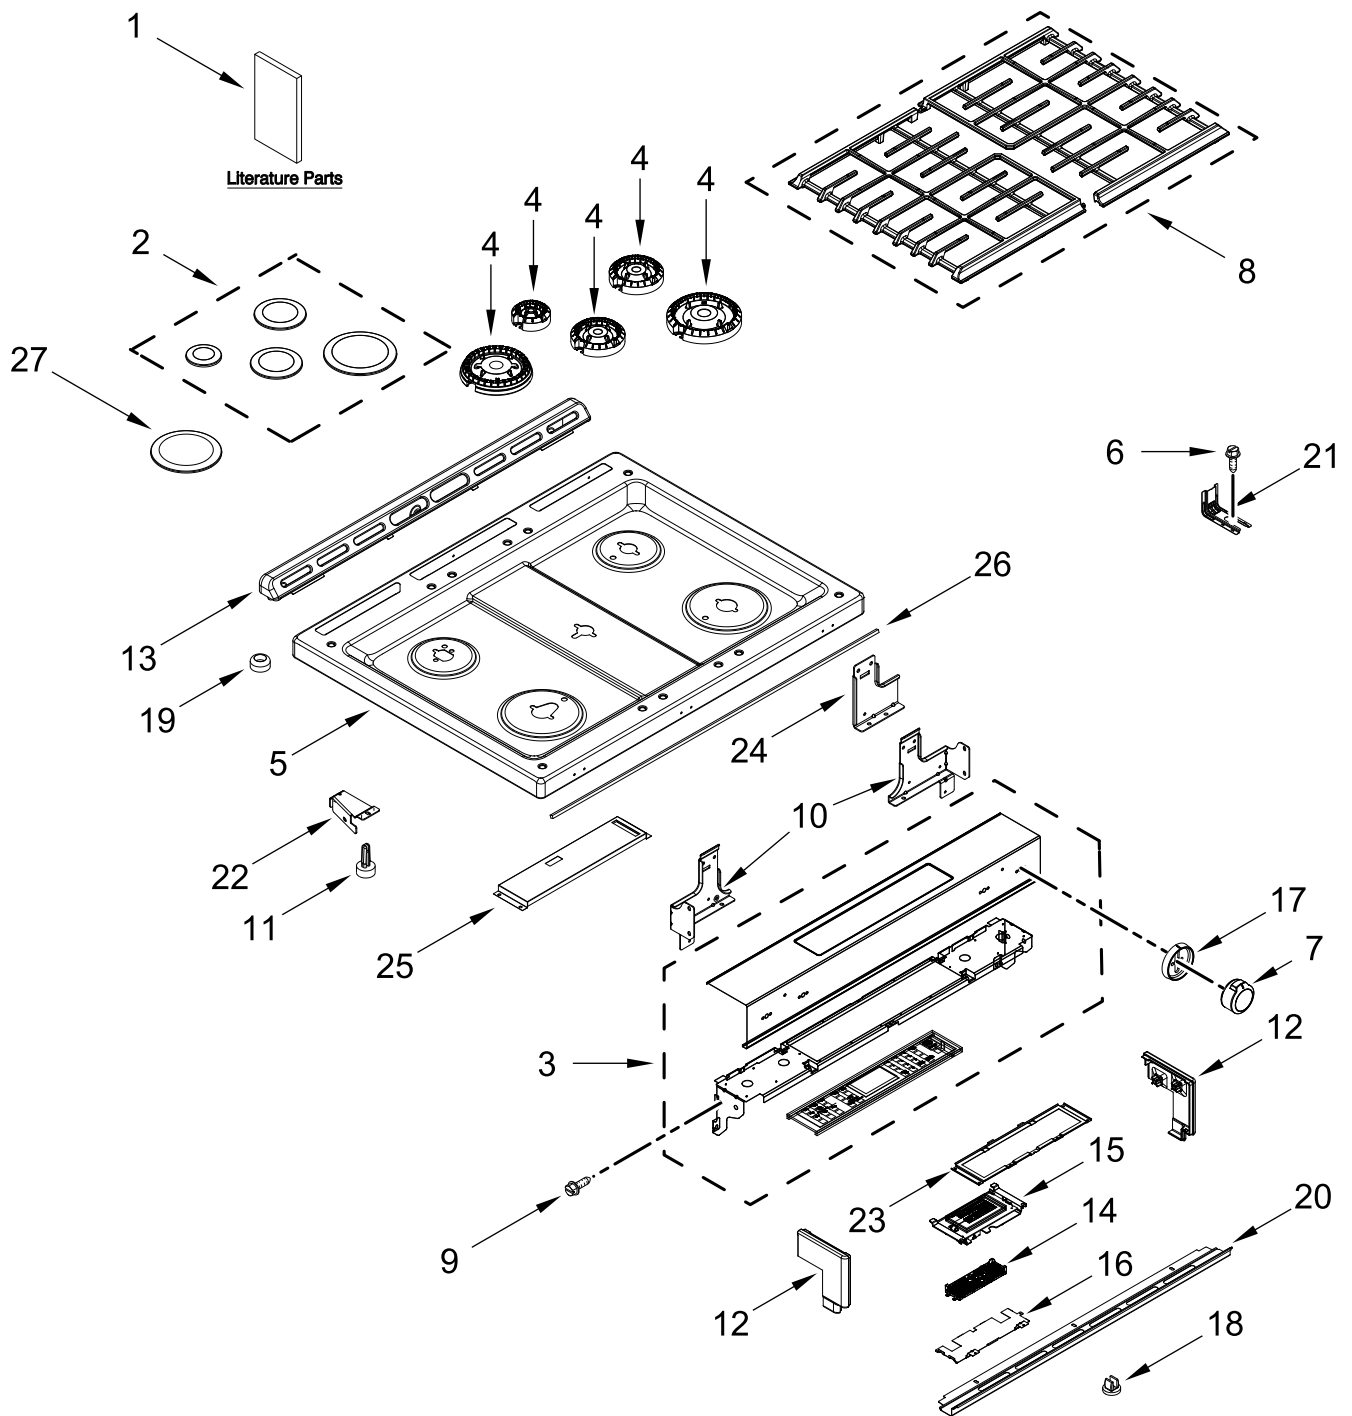

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8		Kit, Grate (Set of 2)	24	W10598048	Bracket, Console (Center)
	W11426594	Owners Manual		W10432520	Black	25	W11355689	Keypad Shield
	W11427468	Quick Start Guide	9	3196169	Screw	26	W11512127	Gasket, Console and Cooktop
	W11565456	Tech Sheet	10	W11563529	Bracket,Support (Left)	27		Cap, Stack Burner
2		Caps, Burner		W11563527	Bracket, Support (Right)		W11346163	Black (Left Front)
	W11352136	Black (Left Rear, Right Front, Right Rear)	11	8016P022-60	Glide, Main Top			FOLLOWING PARTS NOT ILLUSTRATED
		(Center)	12		Endcap			
3		Assembly, Console		W10555937	Stainless (Left)		W11465340	Main Harness
	W10901124	Stainless		W10555940	Stainless (Right)		W10754419	Harness, Bake and Broil
4	W11348511	Flame Spreader, Stack (Left Front)	13		Trim, Vent		W10598169	Harness, Display
	W11352197	Flame Spreader (Left Rear)		W10577781	Black		W10575120	Harness, Keypad
	W11352193	Flame Spreader (Right Front)	14	W11683486	Control, MRC2		313438	Clip, Harness
	W11352195	Flame Spreader (Right Rear and Center)	15	W10759325	Assembly, Display		3196520	Clip, Wire
			16	W10558372	Bracket, Control		W10580229	Wire, Ground
			17		Bezel		7111P017-60	Clamp, Wire
				W10785119	Stainless (Kit of 5)		3196896	Clip, Wire
5		Cooktop	18	W10645947	Grommet			
	W11341028	Black	19	W10854253	Bumper			
6	7101P485-60	Screw, Anti-Tip Kit	20		Console, Lower Panel			
				W10555934	Stainless			
7		Knob	21	W11379947	Bracket, Anti-Tip			
	W10786065	Stainless (All except Left Front)	22	W10162253	Brace, Corner (Left)			
	W10786064	Stainless (Left Front)		W10162252	Brace, Corner (Right)			
			23	W10555923	Bracket, User Interface			


CHASSIS PARTS

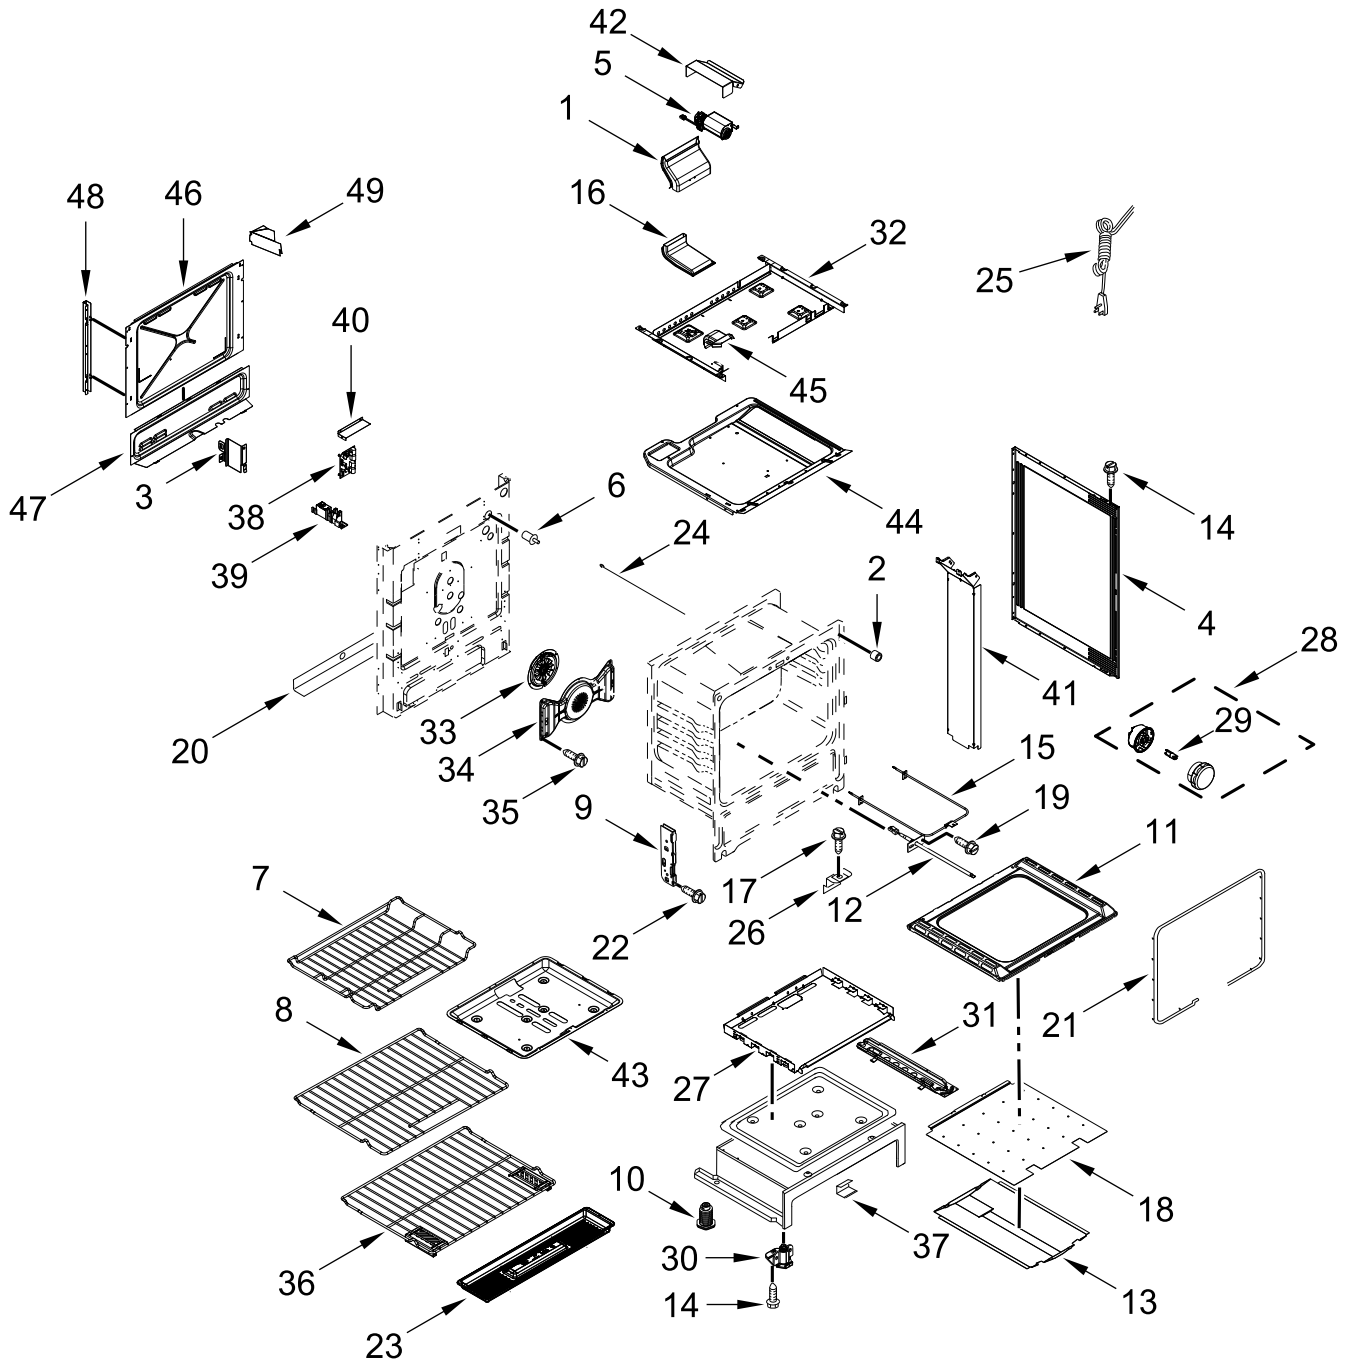

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10614920	Assembly, Flue	20	W10435470	Brace, Main Back	37	W10137382	Clip, Panel
2	9758701	Spacer, Door	21	W11491752	Gasket, Door	38	W10457998	Module, Spark (0 plus 2)
3	W10273002	Bracket, Oven Support	22	W10031780	Screw	39	W11350452	Spark Module
4		Panel, Side	23	W10686408	Kit, Reservoir (Steam Rack)	40	W11206138	Guard, Splash
	W10162245	Black	24	W10273192	Rod, Door Switch	41	W10162254	Duct, Cooling
5	W11467246	Cooling Fan	25	W10910642	Cord, Power	42	W10162255	Duct, Cover
6	W11511828	Switch, Door	26	W10035900	Support, Oven Bottom	43	W11379356	Pan, Bake
7	W10554006	Rack, Maximum Capacity	27	W10541959	Shield, Bake	44	W10289168	Box, Burner SI
8	W10554005	Rack, Heavy Duty	28	W11634772	Light Assembly	45	W10162257	Duct, Cooktop
9	W10289077	Receiver, Hinge	29	W10571723	Bulb, Halogen 40 Watts	46	W11379354	Cover, Back
10	W10058460	Foot, Leveling	30	W10341186	Front Foot Assembly	47	W10162249	Cover, Wire
11	W10211368	Bottom, Oven	31	W10390008	Base Rail Assembly (Left)	48	W10162241	Channel, Rear
12	W10586204	Sensor				49	W10818358	Shield, Wire
13	3601P356-45	Baffle, Bake Burner		W10390007	Base Rail Assembly (Right)			FOLLOWING PARTS NOT ILLUSTRATED
14	3196178	Screw					4820F015-59	Insulation, Strap
15	W10552502	Element, Broil Assist	32	W11320442	Gas Box Burner		W10289173	Insulation, Wrap
16	W11040249	Assembly, Flue (Upper)	33	W11353926	Convection Assembly		W10162240	Insulation, Back
17	W10362924	Screw	34	W10346153	Baffle, Full Convection			
18	W10323077	Diffuser, Flame	35	W10362924	Screw			
19	3196178	Screw	36	W10554007	Rack, Steam			


MANIFOLD PARTS

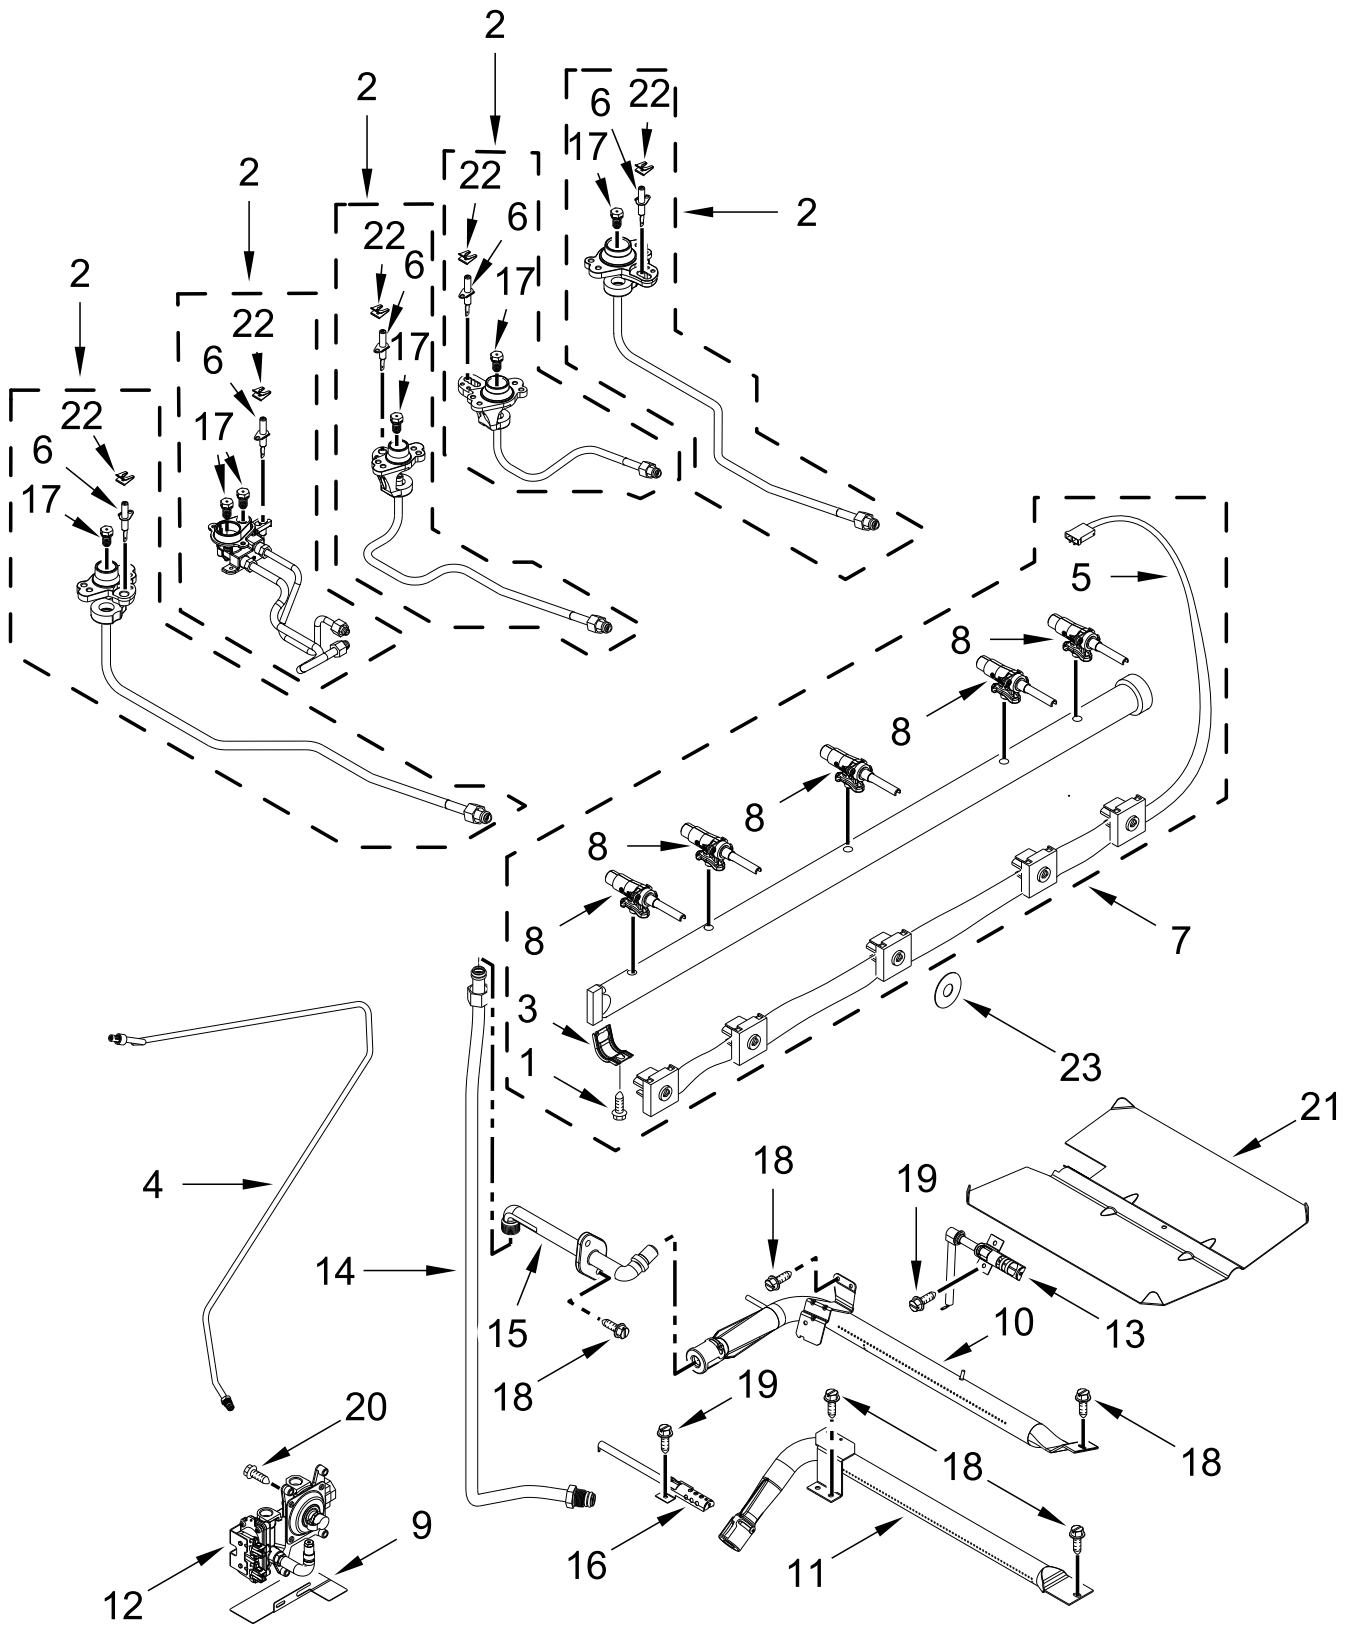

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	8	W10432224	Valve, Gas Duel (Left Front)	17	W11354861	Orifice (17K) (Left Front)
2	W11230090	Orifice Assembly (Left Front)		W10831590	Valve, Gas (Left Rear)		W11354862	Orifice (1.45K) (Left Front)
	W11186509	Orifice Assembly (Left Rear)		W10566062	Valve, Gas (Right Front)		W10849719	Orifice (5K) (Left Rear)
	W11186526	Orifice Assembly (Right Front)		W10566057	Valve, Gas (Right Rear and Center)		W10849717	Orifice (15K) (Right Front)
	W11186522	Orifice Assembly (Right Rear)					W10849714	Orifice (9.5K) (Right Rear)
	W11186518	Orifice Assembly (Center)	9	W10224921	Bracket, Aegis		W10849715	Orifice (8K) (Center)
3	W10949105	Bracket, Saddle Valve	10	W10439242	Burner, Broiler			
4	W10432252	Tube, Gas Supply	11	W10680035	Burner, Bake	18	3196178	Screw
5	W10432517	Harness, Switch Spark	12	W10554066	Valve, Regulator	19	3196385	Screw
6	W10898387	Electrode, Burner (Left Front)	13	W10324262	Igniter, Bake	20	3400016	Screw
	W10669525	Electrode (Left Rear)	14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)	21	3601P336-45	Baffle, Broil Burner
	W10669524	Electrode, Burner (Right Front and Center)	15	W10583216	Fitting, Broil Burner	22	W10827923	Electrode, Spring
	W10669523	Electrode, Burner (Right Rear)	16	W10333842	Electrode, Broil	23	W10140571	Seal, Switch Shaft
7	W11356345	Manifold Assembly						FOLLOWING PARTS NOT ILLUSTRATED
							W11397194	LP Conversion Kit
							W10566535	LP Conversion Kit (Bake and Broil)
							W10400494	Orifice, LP Bake
							W10465078	Orifice, LP Broil
							W10182767	Tie, Manifold Wire

DOOR PARTS

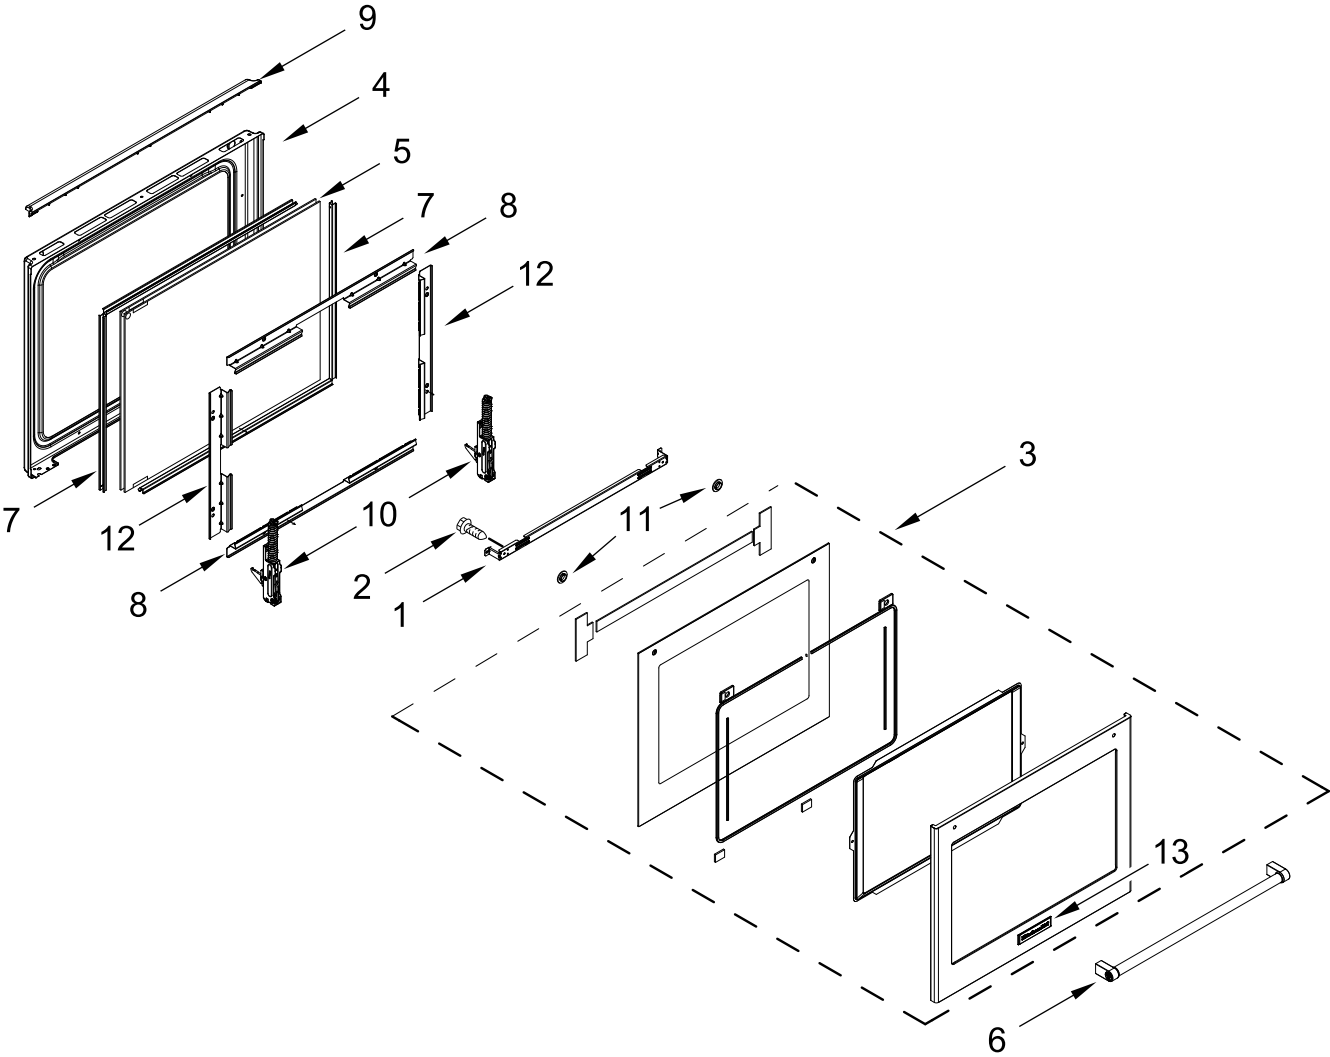


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10541911	Bracket, Glass Upper Handle
2	8533988	Screw
3		Assembly, Outer Door
	W10634271	Stainless
4	W10826568	Liner, Door

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
5	W11223202	Glass, Inner
6		Assembly, Door Handle
	W11669501	Stainless
7	W11379948	Glass Spacer
8	W10813140	Rail, Horizontal Support

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9		Scoop, Door
	W10613791	Black
10	W10885519	Hinge, Door (Active)
11	W10319024	Washer, Door
12	W10813139	Rail, Vertical Support
13	W10518672	Badge

DRAWER PARTS

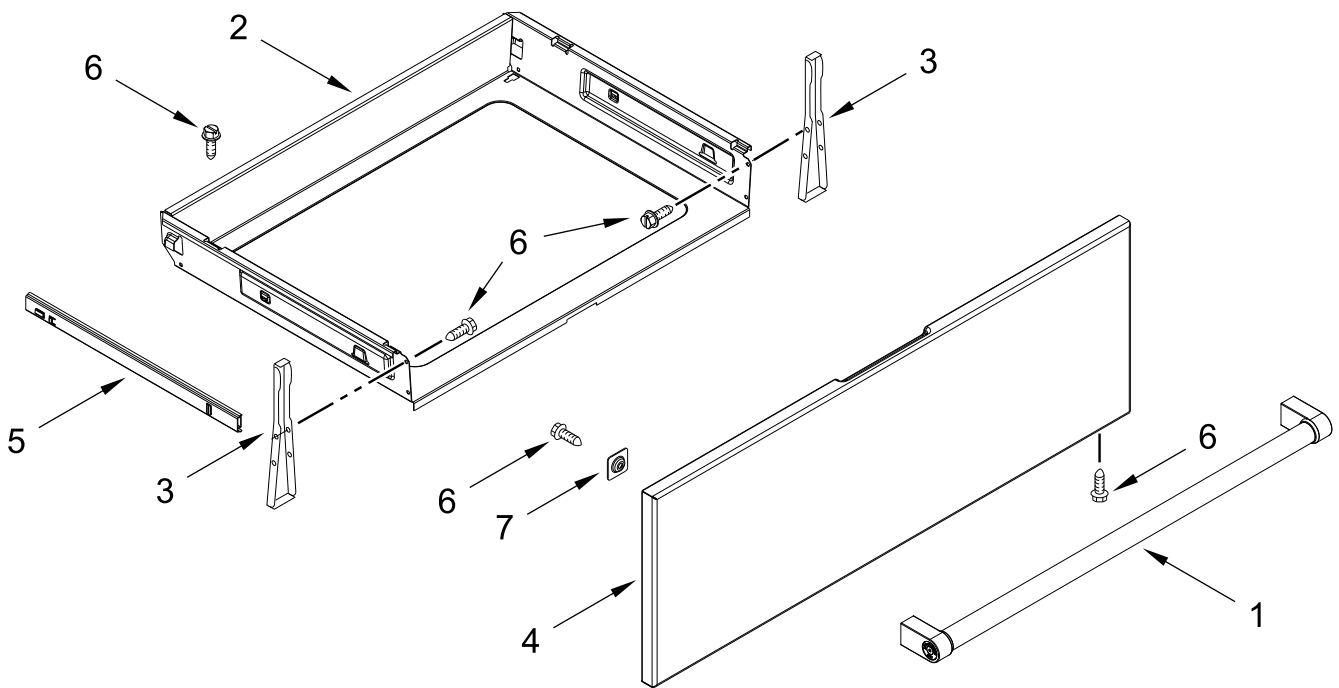

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	5	W10441804	Slide, Drawer (Left)	6	8533988	Screw
	W11669501	Stainless		W10441805	Slide, Drawer (Right)	7	3823F017-45	Spacer, Handle
2	W10688022	Drawer, Storage						
3	W10318026	Bracket, Mounting						
4		Panel, Drawer Front						
	W10541954	Stainless						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350939	Enamel, Black
	285006	Black
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	WA906B	Scraper, Cooktop
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432545	Kit, Grill
	W10432019	Alt Cleaning Kit Assembly, Trim (Includes Blind Threaded Insert)
		(5/8 in)
	W10675026	Black
	W10675027	White
	W10675028	Stainless (1 1/8 in)
	W10731886	Black
	W10731885	White
	W10731887	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless