




**ELECTRIC RANGE
30" FREESTANDING CONVECTION (Fingerprint Resistant)**

MODELS:

MER8800FZ6 (Stainless)


COOKTOP PARTS

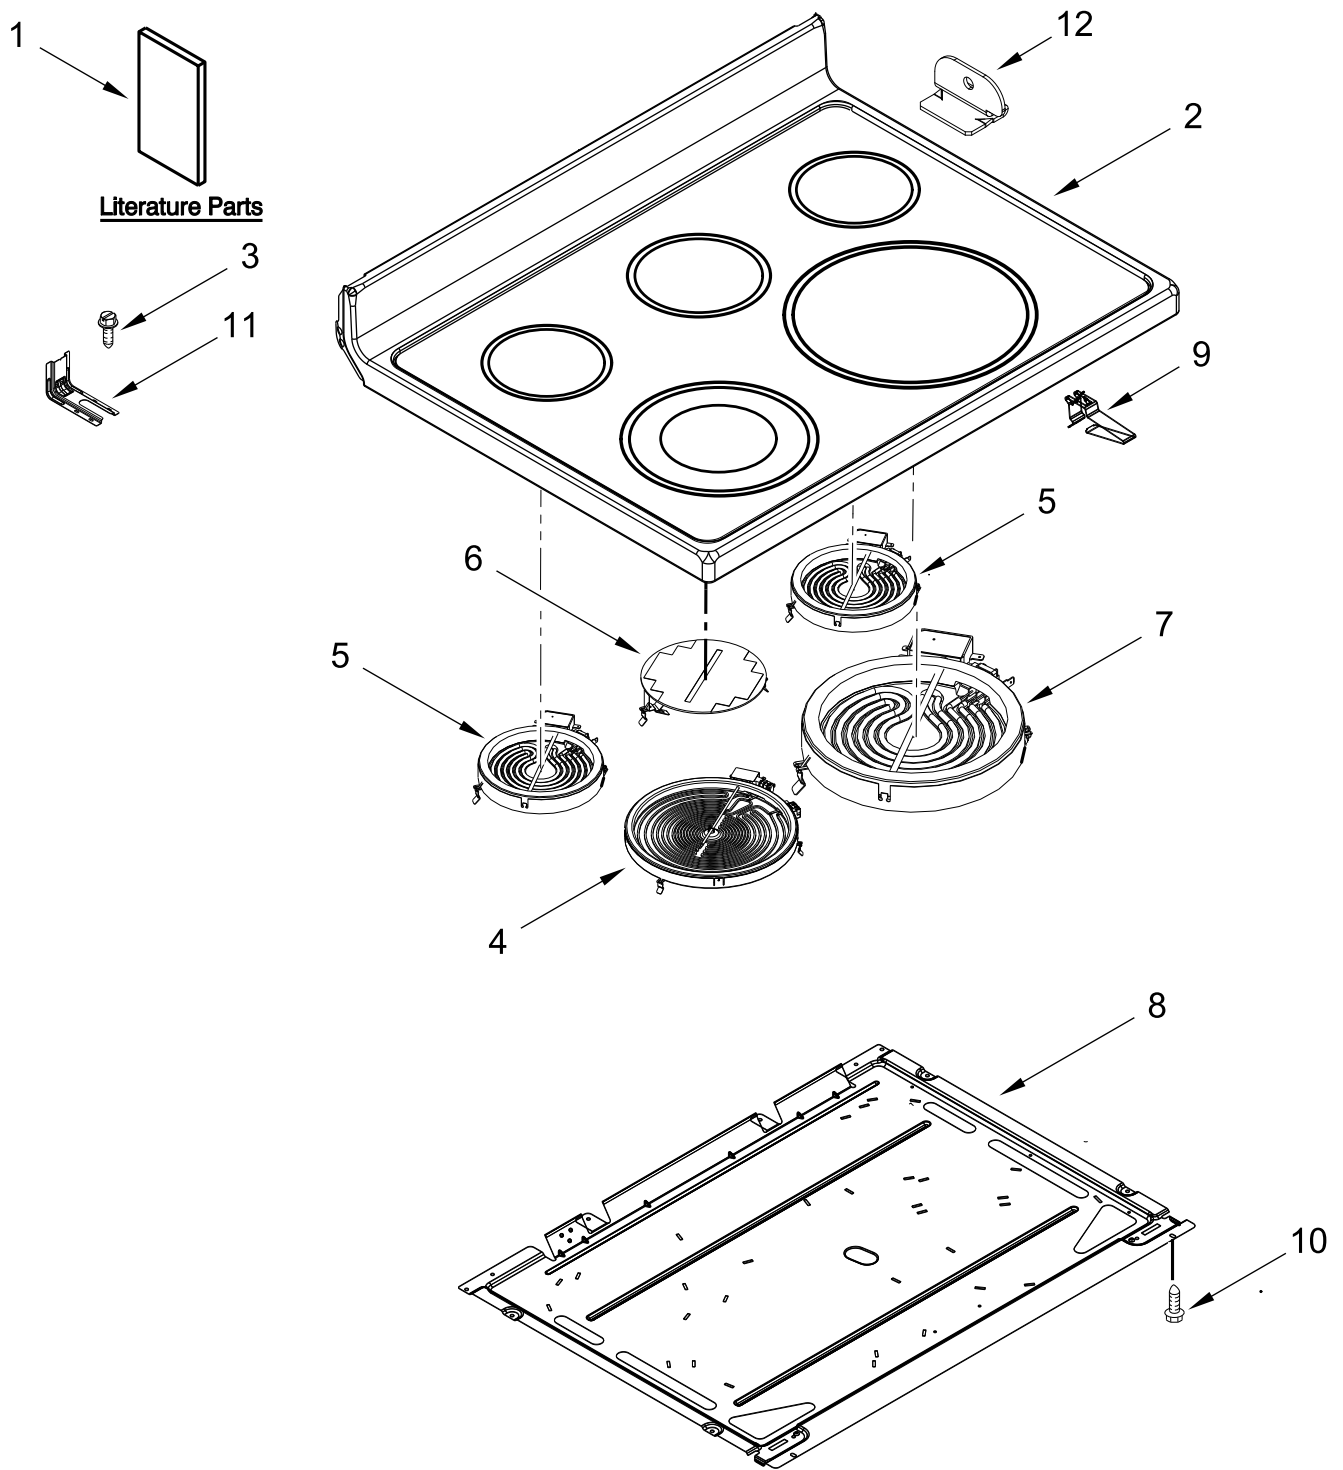

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W10799048	Element, Warm Zone	12	W10607641	Bracket, Cooktop (Left)
	W11509609	Use and Care Guide			(Center Rear)		W10607642	Bracket, Cooktop (Right)
	W11503320	Tech Sheet, (English)	7	W10251108	Element (3200W)			FOLLOWING PARTS NOT ILLUSTRATED
	W11435575	Quick Start Guide			(Right Front)			
2		Cooktop	8	W10691223	Pan, Radiant Element			
	W10655916	Black	9	W11600012	Spring, Element		W11451724	Harness, Main
3	7101P485-60	Screw, Anti-Tip Kit	10	W10327235	Screw		W11134596	Harness, Cooktop (Left)
4	W10535150	Element (3000W, 1000/2000W)	11	W11379945	Bracket, Anti-Tip		W11134550	Harness, Cooktop (Right)
		(Left Front)					W11134592	Harness, Warm Zone
5	W10248261	Element (1200W)					W11212183	Harness, Sensor
		(Left Rear and Right Rear)						


CONTROL PANEL PARTS

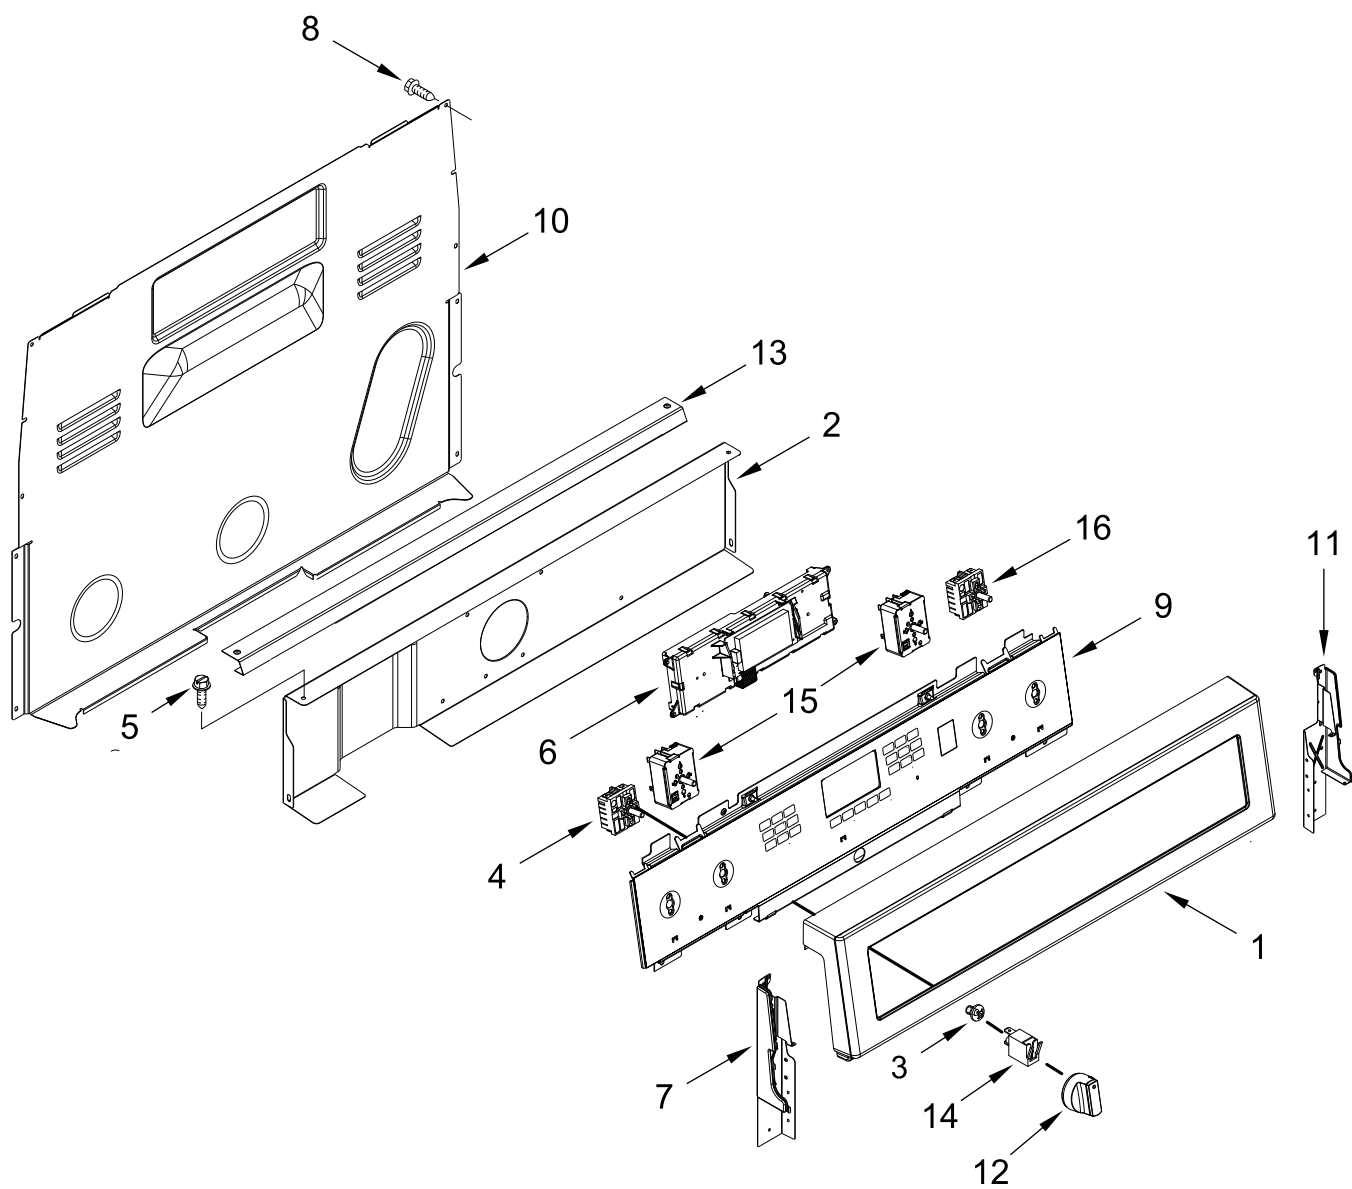

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console	8	9780274	Screw	14	W10432504	Hot Surface Indicator
	W10645848	Stainless	9		Overlay, Active	15	W10578768	Switch, Infinite
2	W10134247	Shield, Heat		W11469056	Black			(Left Rear and Right Rear)
3	3400882	Screw	10	8272473	Cover, Upper Rear	16	W10437094	Switch, Infinite
4	W10437092	Switch, Infinite (Left Front)	11		Endcap			(Right Front)
5	W10362924	Screw		W11130379	Black (Right)			
6	W11456299	Control (MRC)	12		Knob			
7		Endcap		W10858252	Stainless			
	W11130372	Black (Left)	13	W10525121	Bracket, Console Mounting			


CHASSIS PARTS

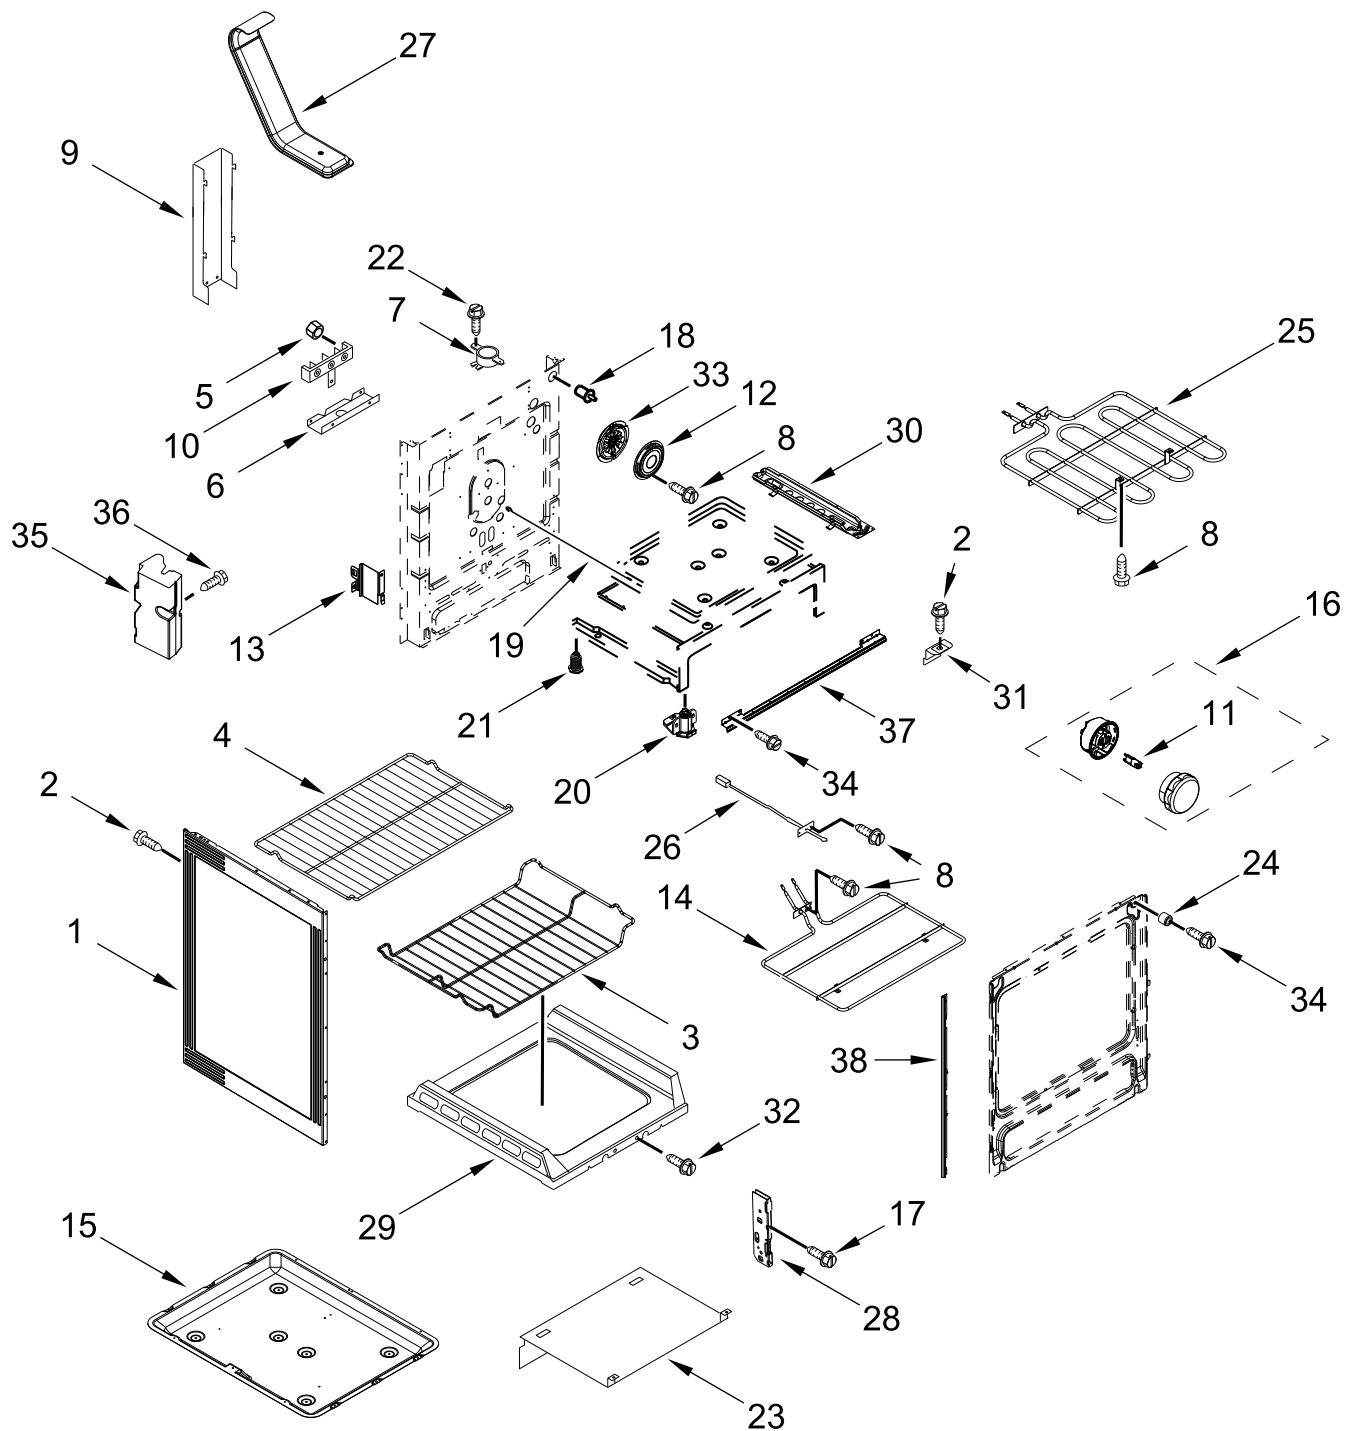

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Side	16	W11634772	Light Assembly	32	W10516115	Screw
	W10162245	Black	17	W10031780	Screw	33	W10756304	Assembly, Convection
2	3196178	Screw	18	W11511828	Switch, Door	34	3196560	Screw
3	W10289145	Rack, Oven (Gull-Wing)	19	W10273192	Rod, Door Switch	35	W10910404	Counterweight
4	W10531060	Rack, Oven	20	W10341186	Front Foot Assembly	36	W11034869	Screw
5	3400029	Nut	21	W10058460	Foot, Leveling	37	W11620269	Bracket, Front Frame
6	3186034	Bracket, Service	22	3196172	Screw	38	W11510560	Barrier Rail, Rubber (Left and Right)
7	3196548	Fuse, Thermal	23	W10726740	Shield, Heat			FOLLOWING PARTS NOT ILLUSTRATED
8	W10362924	Screw	24	9758701	Spacer, Door			
9	W10326122	Cover, Terminal Block	25	W11095929	Element, Broil			
10	W10245259	Block, Terminal	26	W10586204	Sensor			
11	W10571723	Bulb, Halogen 40 Watts	27	W10134285	Tube, Vent	W10194393		Insulation, Wrap
			28	W10289077	Receiver, Hinge	W10225524		Insulation, Back
			29	W10774446	Bottom, Oven	W10225523		Insulation, Bottom
12	W10346154	Cover, Convection	30	W10390008	Base Rail Assembly (Left)	4820F015-59		Insulation, Strap
13	W10273002	Bracket, Oven Support		W10390007	Base Rail Assembly (Right)	W10281322		Kit, Bare Wire Adapter Block
14	W10774342	Element, Bake						
15	W11379357	Bake Pan	31	W10035900	Support, Oven Bottom			


DOOR PARTS

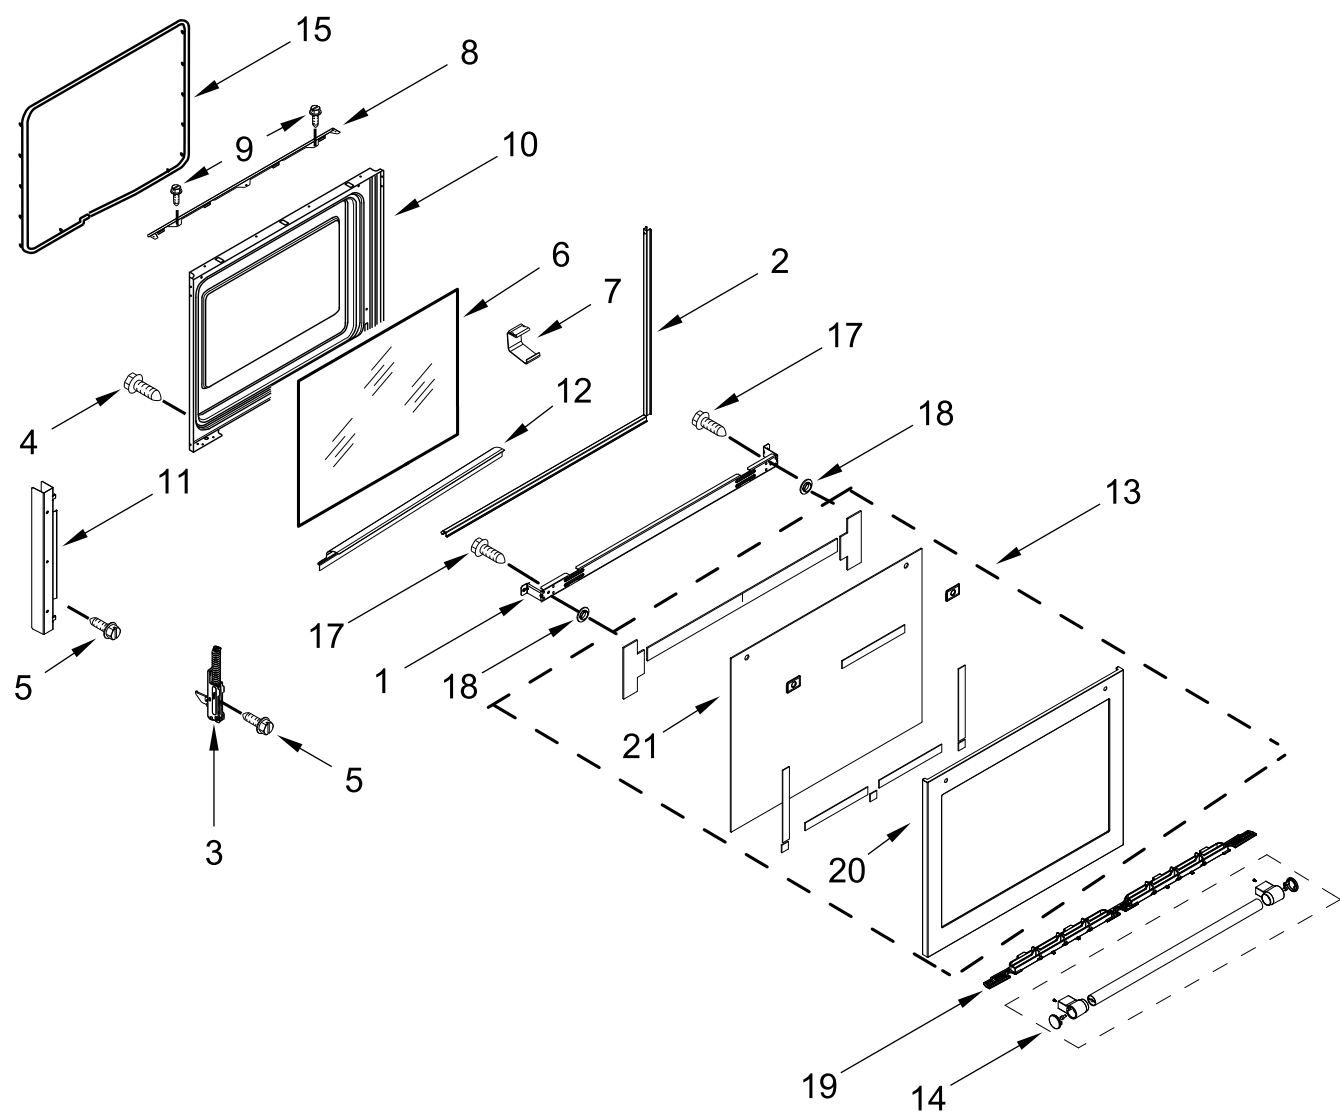

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10541911	Bracket, Glass Upper Handle	10	W10826568	Liner, Door	18	W10319024	Washer, Door
2	W11379948	Glass Spacer	11	W10813139	Rail, Vertical Support	19	W11440161	Bottom, Door Cover
3	W10885519	Hinge, Door (Active)	12		Scoop, Door	20		Skin, Door
4	W10031790	Screw		W10613791	Black		W10861554	Stainless
5	W10362924	Screw	13		Assembly, Outer Door	21	W10693388	Glass, Outer Door (Stainless)
6	W11223202	Glass, Inner		W10867480	Stainless			
7	W10137382	Clip, Panel	14		Handle, Assembly			
8	W10813140	Rail, Horizontal Support		W10834521	Stainless			
9	9780274	Screw	15	W11491752	Gasket, Door			
			16	W10612925	Badge			
			17	W11091878	Screw			

DRAWER PARTS

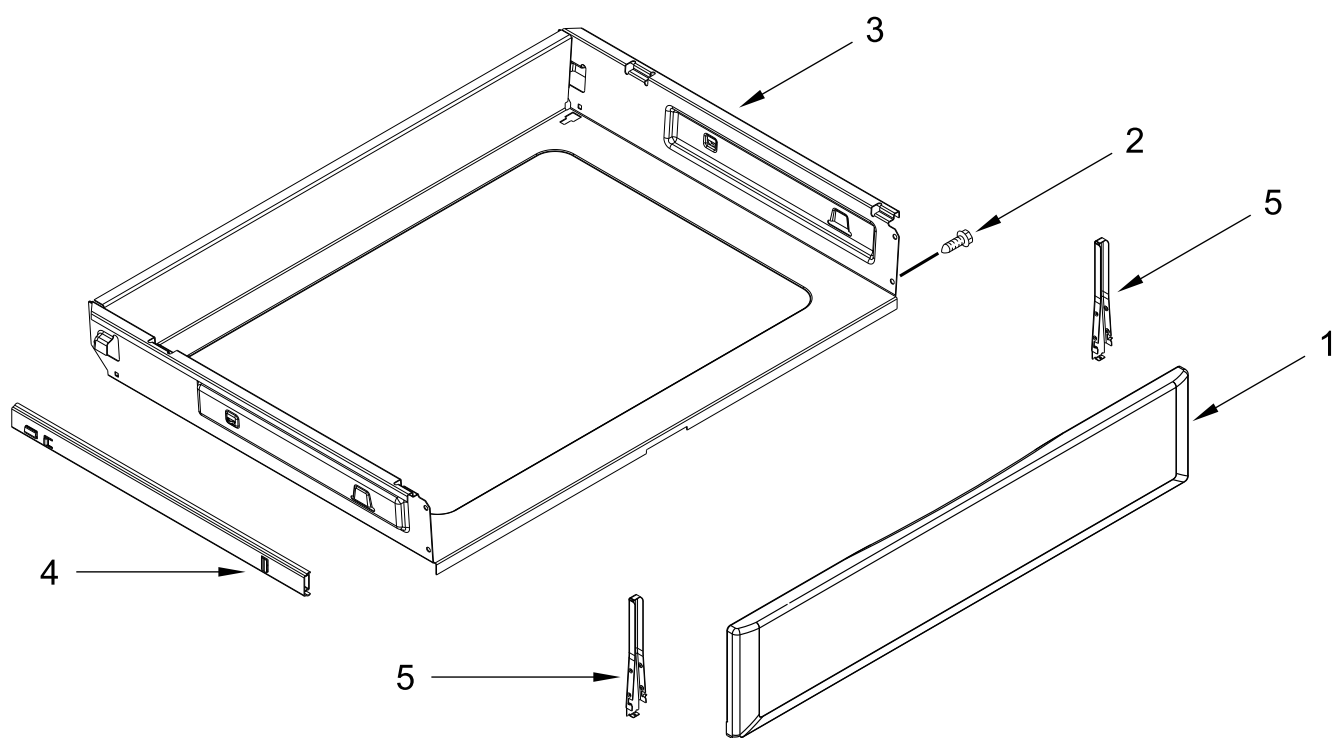

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W11190209	Stainless
2	3196169	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
5	W10318027	Bracket, Drawer

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72032	Black
	72017	White
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	285006	Black
	350930	White
	4392901	Biscuit and Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	3191048	Glass Cleaner

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10432019	Alt Cleaning Kit
	31605	Kit, Cooktop Care
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	W10205524	Split Oven Rack
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting